




ALUMINUM TRAIL ENGINE GUARD
Ref.: 2CP0900013

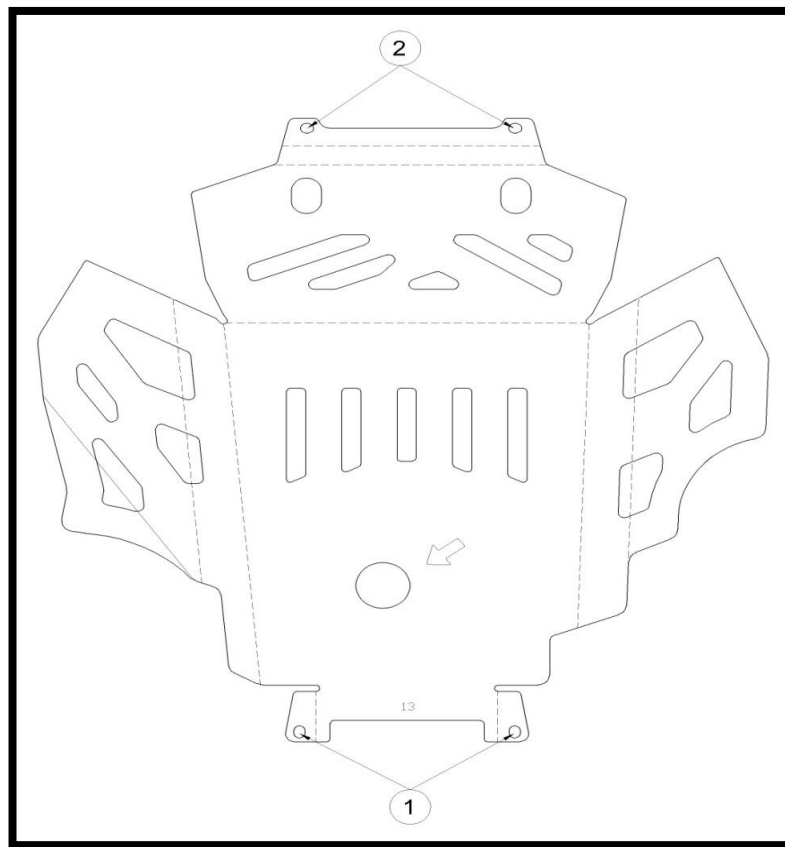

2	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M8x20 - DIN 6921	2
1	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M8x16 - DIN 6921	2
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

Assembly Sequence / Instrução de Montagem

English:

Attention - Follow the installation sequence as you can see in the photos.




- **Photo A:** Remove original protection.
- **Photo B:** Mount protection in the bike frame with item Nº1 (Screw) in the rear part of the protection.
- **Photo C:** Apply item Nº2 (Screw) in the front part of the protection.
- **Photo D:** Tight all screws.

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto A:** Remover protecção de origem.
- **Foto B:** Montar protecção no quadro da moto com o item Nº1 (Screw) na parte de trás da protecção.
- **Foto C:** Aplicar o item Nº2 (Screw) na parte da frente da protecção.
- **Foto D:** Apertar todos os parafusos.

ALUMINUM TRAIL ENGINE GUARD

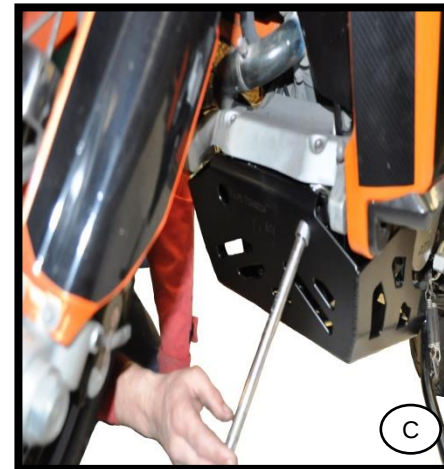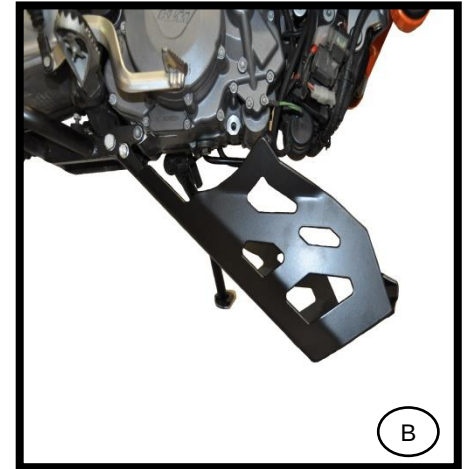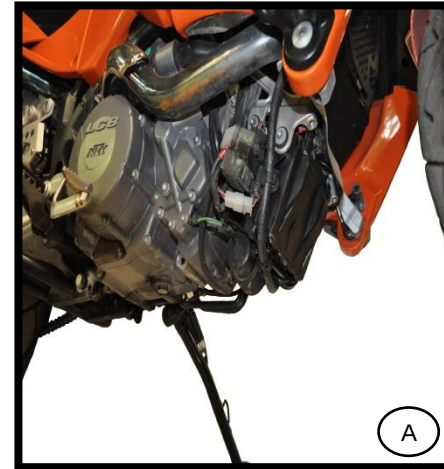

Français:

Attention: Suivre la séquence de photos d'assemblage.

- **Photo A:** Enlever la protection de origine.
- **Photo B:** Monter la protection sur le cadre de la moto avec l'item Nº1 (Screw) partie arrière de la protection.
- **Photo C:** Appliquer l'item Nº2 (Screw) sur la partie avant de la protection.
- **Photo D:** Serrer toutes les vis.