


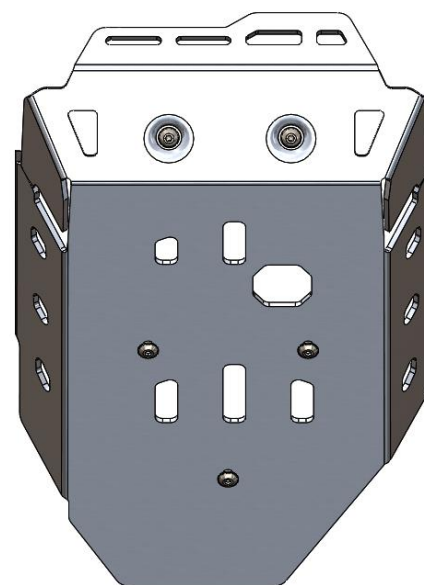

ALUMINUM TRAIL ENGINE GUARD


Ref^a.: 2CP0900015

CROSSPRO
PROTECTION PARTS



Management
System
ISO 9001:2015
www.tuv.com
ID: 910677726

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

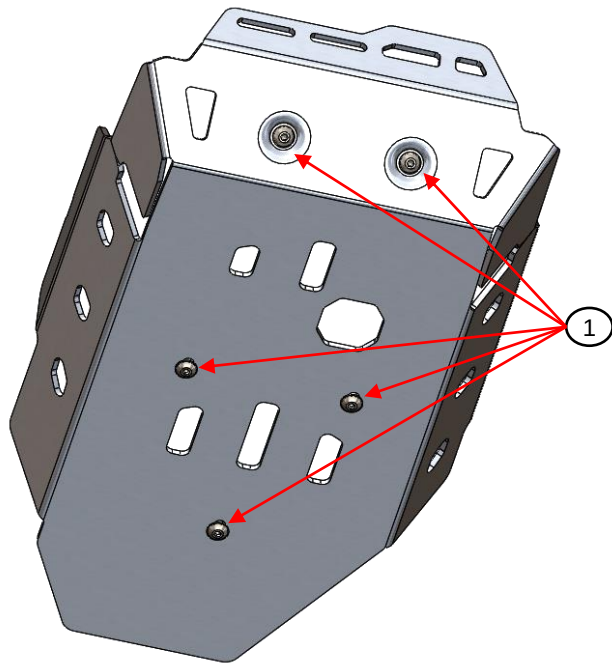

1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x16 - ISO 7380	5
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention - Follow the installation sequence as you can see in the photos.

- **Photo A:** Remove original protection.
- **Photo B:** Mount protection on the bike frame with item N°1 (Screw).
- **Photo C:** Tight all screws.

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto A:** Remover proteção de origem.
- **Foto B:** Montar proteção no quadro da moto com o item N°1 (Parafuso).
- **Foto C:** Apertar todos os parafusos.

Français:

Attention: Suivre la séquence de photos d'assemblage.

- **Photo A:** Enlever la protection de origine.
- **Photo B:** Monter la protection dans le cadre de la moto avec l'item N°1 (Screw).
- **Photo C:** Serrer toutes les vis.

ALUMINUM TRAIL ENGINE GUARD

