



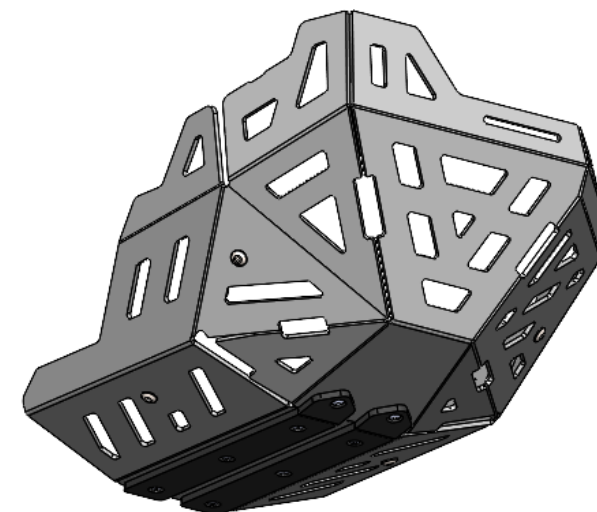


ALUMINUM TRAIL ENGINE GUARD

Ref.: 2CP0900072

CROSSPRO
PROTECTION PARTS

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

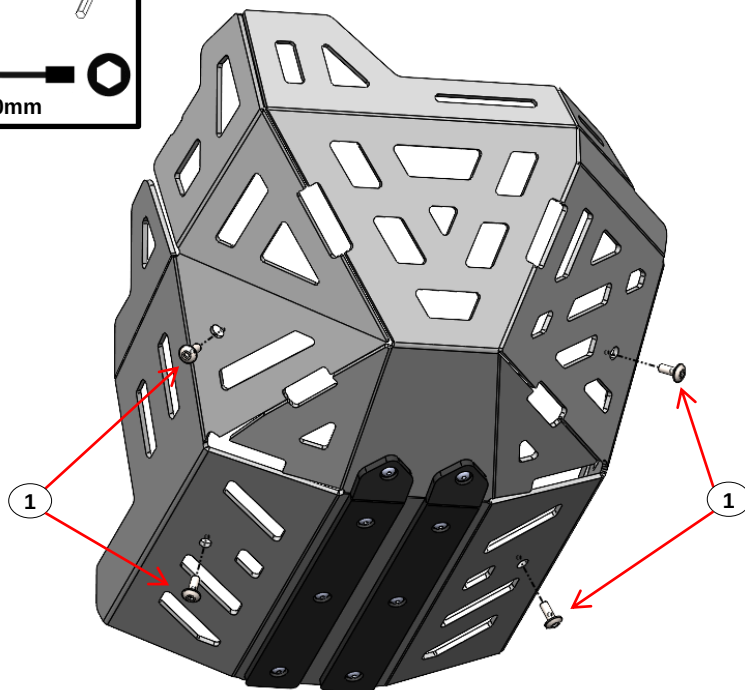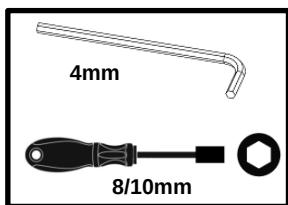

1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x16 - ISO 7380	4
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention: Follow the installation sequence as you can see in the photos.




- **Photos A and B:** Remove original engine protections.
- **Photos C and D:** Mount protection on the motorcycle frame with item Nº1 (Screw – x4) as marked in the assembly instruction and tight all screws.

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto A e B:** Remover proteções de motor de origem.
- **Fotos C e D:** Montar proteção no quadro da moto com o item Nº1 (Parafuso – x4) como marcado na instrução de montagem e apertar todos os parafusos.

ALUMINUM TRAIL ENGINE GUARD

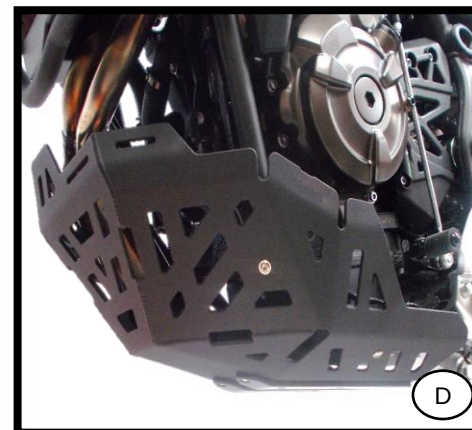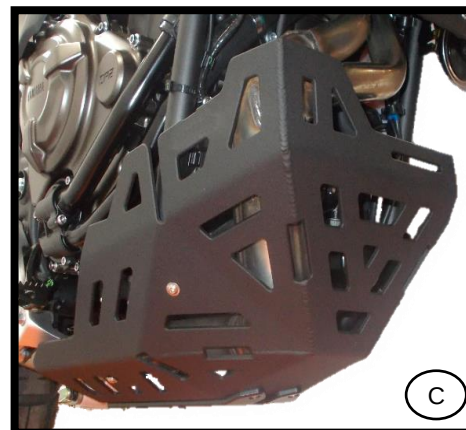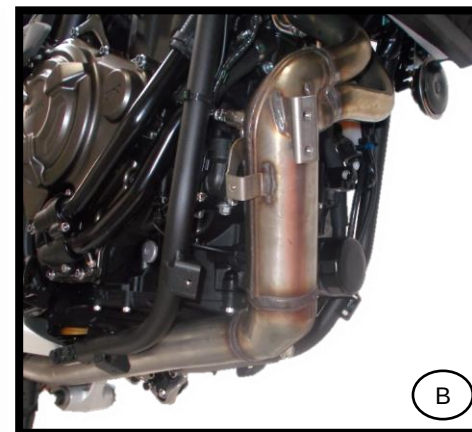

Français:

Attention: Suivre la séquence de photos d'assemblage.

- **Photo A et B:** Retirer les protection d'origine.
- **Photos C et D:** Monter la protection sur le cadre de la moto avec l'item Nº1 (Vis – x4) comme indiqué dans les intructions de montage et serrer toutes les vis.