

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

- **Foto A, B e C:** Remover todos os parafusos e porcas de origem que pode ver nas fotos.
- **Foto D:** Aplicar o item N°6 (Casquilho Alumínio – x1).
- **Fotos E, F e G:** Aplicar Carenagem Lado Esquerdo com os itens N°1 (Parafuso – x1), N°4 (Anilha – x1), N°6 (Casquilho Alumínio – x1) e N°3 (Parafuso – x1).
- **Foto H:** Aplicar o item N°6 (Casquilho Alumínio – x1).
- **Fotos I e J:** Aplicar Carenagem Lado Direito com o item N°3 (Parafuso – x1).
- **Foto K:** Aplicar os itens N°4 (Anilha – x1) e N°5 (Porca Freada – x1) no item N°1 (Parafuso – x1) anteriormente montado e aplicar o item N°2 (Parafuso – x1) para unir as duas partes da proteção (Parte Esquerda e Direita).
- **Foto L:** Ajustar os itens N°1 (Parafuso – x1) e N°5 (Porca Freada – x1) anteriormente montados.
- **Foto M:** Apertar todos os parafusos.

Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.


- **Photos A, B et C:** Retirer toutes les vis et écrou d'origine comme vous pouvez voir sur les photos.
- **Photo D:** Appliquer l'item N°6 (Douille Aluminium – x1).
- **Photo E, F et G:** Appliquer Protection Côté Gauche l'item N°1 (Vis – x1), N°4 (Rondelle – x1), N°6 (Douille Aluminium – x1) et N°3 (Vis – x1).
- **Photo H:** Appliquer l'item N°6 (Douille Aluminium – x1).
- **Photos I et J:** Appliquer Protection Côté Droit avec l'item N°3 (Vis – x1).
- **Photo K:** Appliquer les items N°4 (Rondelle – x1) et N°5 (Écrou Freine – x1) sur l'item N°1 (Vis – x1) précédent monte et apres appliquer l'item N°2 (Vis – x1) rejoindre les deux parties de la protection (Côté Gauche et Droit).
- **Photo L:** Ajuster les items N°1 (Vis – x1) et N°5 (Écrou Freine – x1) précédent monte.
- **Photo M:** Serrer toutes les vis.



ALUMINUM TRAIL CRASH BAR

Ref.: 2CP1250018

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

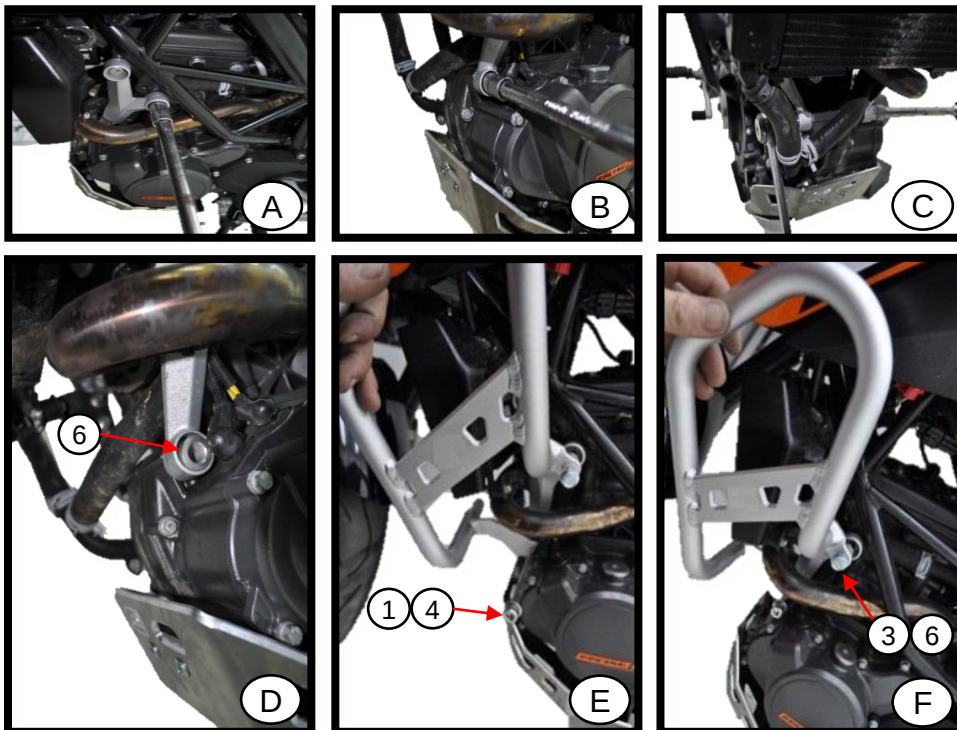

6	Casquilho Alumínio / Aluminum Bushing	Ø20xØ11x15mm	4
5	Porca Freada / Nut Nylock	M10 - DIN 985	1
4	Anilha / Washer	M10 - DIN 125	2
3	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M8x35 - DIN 6921	2
2	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	2
1	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x160 - DIN 912	1
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention – Follow the assembly instruction sequence as you can see in the photos.

- **Photos A, B and C:** Remove all screws and nuts from origin as you can see in the photos.
- **Photo D:** Apply item N°6 (Aluminum Bushing – x1).
- **Photos E, F and G:** Apply Left Side Protection with items N°1 (Screw – x1), N°4 (Washer – x1), N°6 (Aluminum Bushing – x1) and N°3 (Screw – x1).
- **Photo H:** Apply item N°6 (Aluminum Bushing – x1).
- **Photos I and J:** Mount Right Side Protection with item N°3 (Screw – x1).
- **Photo K:** Apply items N°4 (Washer – x1) and N°5 (Nut Nylock – x1) in to item N°1 (Screw – x1) previously mounted and after apply item N°2 (Screw – x1) to join the two parts of the protection (Left and Right side).
- **Photo L:** Adjust items N°1 (Screw – x1) and N°5 (Nut Nylock – x1) previously mounted.
- **Photo M:** Tight all screws .

ALUMINUM TRAIL CRASH BAR

