

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto 1:** Retirar plástico de origem (Point A).
- **Fotos 2 e 3:** Desapertar parafuso de origem (Point B) e porca de origem (Ponto C).
- **Foto 4:** Aplicar Proteção de Carenagem Direita com os itens Nº2 (Parafuso) (Ponto C), Nº5 (Porca Freada) e Nº4 (Parafuso) (Ponto D).
- **Foto 5 e 6:** Desapertar parafuso de origem (Ponto E) e porca de origem (Ponto F) (Lado Esquerdo).
- **Foto 7 e 8:** Aplicar Proteção de Carenagem Esquerda com os itens Nº4 (Parafuso) (Ponto G) e Nº3 (Parafuso) e Nº5 (Porca Freada) (Ponto I).
- **Foto 9:** Aplicar tubo de união com o item Nº1 (Parafuso) (Lado Direito).
- **Foto 10:** Aplicar plástico de origem (Ponto A) (Lado Direito).
- **Foto 11:** Aplicar tubo de união com os itens Nº1 (Parafuso) (Lado Esquerdo).
- **Foto 12:** Apertar todos os parafusos e aplicar o item Nº6 (Topo Plástico) (Ponto J).





Français:

Attention – Après la séquence de photos d'assemblage.

- **Photo 1:** Retirer plastic d'origine (Point A).
- **Photos 2 et 3:** Desserrer le vis d'origine (Point B) et écrou d'origine (Point C).
- **Photo 4:** Appliquer Protection Latérale Droit avec les items Nº2 (Vis) (Point C), Nº5 (Écrou) et Nº4 (Vis) (Point D).
- **Photos 5 et 6:** Desserrer le vis d'origine (Point E) et écrou d'origine (Point F) (Côté Gauche).
- **Photos 7 et 8:** Appliquer Protection Latérale Gauche avec les items Nº4 (Vis) (Point G), Nº3 (Vis) et Nº5 (Écrou) (Point I).
- **Photo 9:** Appliquer le tuyau union avec l'item Nº1 (Vis) (Côté Droit).
- **Photo 10:** Appliquer plastic d'origine (Point A) (Lado Direito).
- **Photo 11:** Appliquer le tuyau union avec l'item Nº1 (Vis) (Côté Gauche).
- **Photo 12:** Serrer toutes les vis et appliquer l'item Nº6 (Top Plastique) (Ponto J).



ALUMINUM TRAIL CRASH BAR
TRIUMPH 800 2011-2014
TRIUMPH TIGER 800 XC 2011-2014
Ref.: 2CP1250020

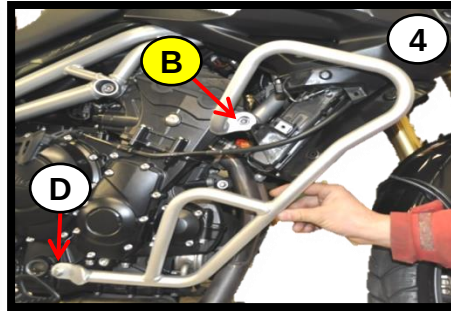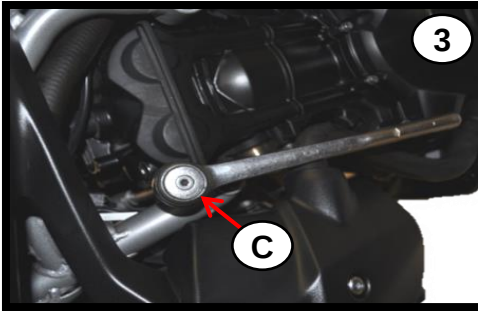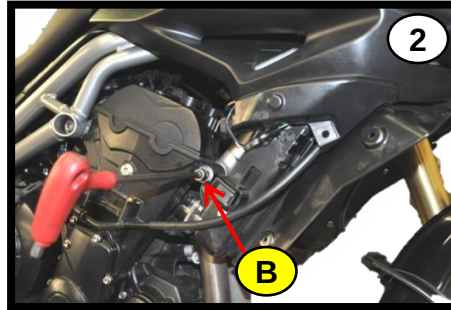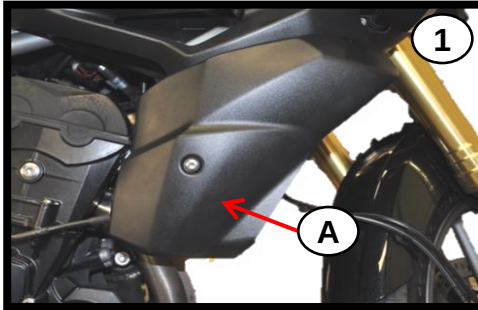

6	Taco Redondo c. Friso / Round Tube Plastic Hole Plug	Ø22 - REF.: 137.001.000.3	2
5	Porca Freada / Nut Nylock	M10 - DIN 985	2
4	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M8x20 - DIN 6921	2
3	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x70 - DIN 912	1
2	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x60 - DIN 912	1
1	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	4

ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
----------	-------------------------	--------------------------	---------

ACESSÓRIOS (ACCESSORIES)

Assembly Sequence / Instrução de Montagem:

English:

Attention – Follow the assembly sequence as seen in the photos.

- **Photo 1:** Remove original plastic (Point A).
- **Photos 2 and 3:** Loosen original screw (Point B) and original nut (Point C).
- **Photo 4:** Apply the Right Side Protection with items N°2 (Screw) (Point C), N°5 (Nut Nylock) and N°4 (Screw) (Point D).
- **Photo 5 and 6:** Loosen original screw (Point E) and original nut (Point F) (Left Side).
- **Photo 7 and 8:** Apply Left Side Protection with items N°4 (Screw) (Point G), N°3 (Screw) and N°5 (Nut Nylock) (Point I).
- **Photo 9:** Apply union pipe with item N°1 (Screw) (Right Side).
- **Photo 10:** Apply original plastic (Point A) (Right Side).
- **Photo 11:** Apply union pipe with item N°1 (Screw) (Left Side).
- **Photo 12:** Tight all screws and apply item N°6 (Plastic Top) (Point J).

ALUMINUM TRAIL CRASH BAR TRIUMPH 800 2011-2014 TRIUMPH TIGER 800 XC 2011-2014

