

Português:

Atenção – Siga a sequência de instrução de montagem.

- **Fotos 1, 2 e 3:** Remover parafusos de origem marcados nas fotos – pontos A, B, C e D.
- **Foto 5:** Montar Carenagem Lado Esquerdo com os itens Nº2 (Parafuso), Nº4 (Anilha) e Nº8 (Casquilho Alumínio) – ponto C.
- **Foto 6:** Aplicar os itens Nº3 (Parafuso), Nº5 (Porca Freada) e Nº7 (Casquilho Alumínio) – ponto D.
- **Foto 7:** Aplicar o item Nº7 (Casquilho Alumínio) – ponto B (Lado Direito)
- **Fotos 8 e 9:** Montar Carenagem Lado Direito com o item Nº5 (Porca Freada) – ponto B.
- **Foto 10:** Aplicar os itens Nº2 (Parafuso), Nº4 (Anilha) e Nº8 (Casquilho Alumínio) – ponto A.
- **Fotos 11 e 12:** Aplicar o item Nº1 (Parafuso) – ponto E.
- **Foto 13:** Apertar os parafusos – pontos A e C.
- **Foto 14:** Apertar parafuso e porca freada – pontos B e D.

Français:





Attention - Suivez la séquence d'instructions d'assemblage.

- **Photos 1, 2, 3 et 4:** Retirer vis d'origine marqué sur les photos – points A, B, C et D.
- **Photo 5:** Monter Crash Bar Côté Gauche avec les items Nº2 (Vis), Nº4 (Rondelle) et Nº8 (Douille Aluminium) - point C.
- **Photo 6:** Appliquer les items Nº3 (Vis), Nº5 (Écrou Freine) et Nº7 (Douille Aluminium) – point D.
- **Photo 7:** Appliquer l'item Nº7 (Douille Aluminium) - point B (Côté Droit).
- **Photos 8 et 9:** Monter Crash Bar Côté Droit avec l'item Nº5 (Écrou Freine) – point B.
- **Photo 10:** Appliquer les items Nº2 (Vis), Nº4 (Rondelle) et Nº8 (Douille Aluminium) – point A.
- **Photos 11 et 12:** Appliquer l'item Nº1 (Vis) – point E.
- **Photo 13:** Serrer les vis – points A et C.
- **Photo 14:** Serrer le vis et écrou freine – point B et D.



ALUMINUM TRAIL CRASH BAR

Ref.: 2CP1250021

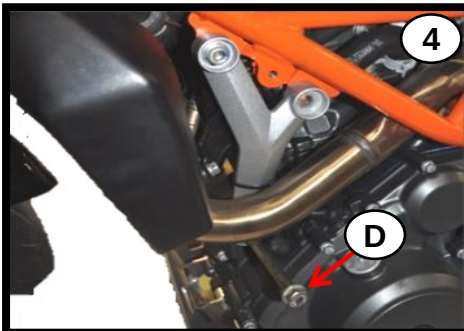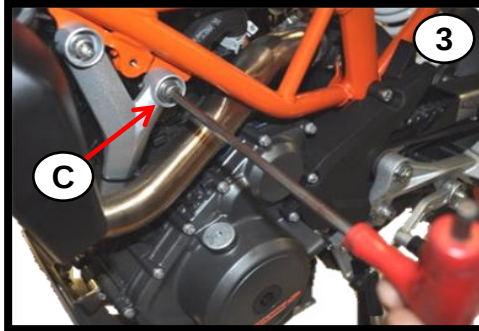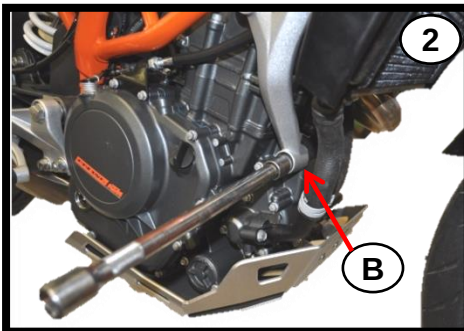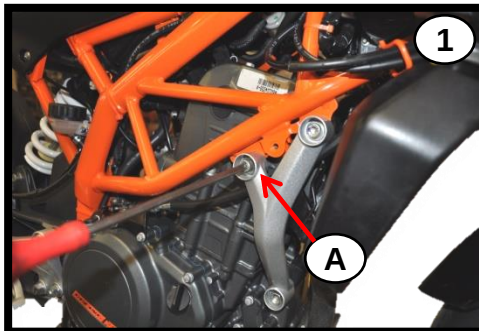

8	Casquilho Alumínio / Aluminum Bushing	Ø20xØ9x20mm	2
7	Casquilho Alumínio / Aluminum Bushing	Ø20xØ11x25mm	2
6	Anilha / Washer	M10 - DIN 125	1
5	Porca Freada / Nut Nylock	M10 - DIN 985	1
4	Anilha / Washer	M8 - DIN 125	2
3	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x200 - DIN 912	1
2	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M8x50 - DIN 912	2
1	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

Instrução de Montagem / Assembly Sequence

English:

Attention – Follow the assembly instruction sequence as you can see in the photos.

- **Photos 1, 2, 3 and 4:** Remove screws of origin marked in the photos - points A, B, C and D.
- **Photo 5:** Mount Left Side Crash Bar with items Nº2 (Screw), Nº4 (Washer) and Nº8 (Aluminum Bushing) - point C.
- **Photo 6:** Apply items Nº3 (Screw), Nº5 (Nut Nylock) and Nº7 (Aluminum Bushing) - point D.
- **Photo 7:** Apply item Nº7 (Aluminum Bushing) - point B (Right Side).
- **Photos 8 and 9:** Mount Right Side Crash Bar with item Nº5 (Nut Nylock) – point B.
- **Photo 10:** Apply items Nº2 (Screw), Nº4 (Washer) and Nº8 (Aluminum Bushing) – point A.
- **Photos 11 and 12:** Apply item Nº1 (Screw) - point E.
- **Photo 13:** Tight screws - points A and C.
- **Photo 14:** Tight screw and nut nylock - points B and D.

ALUMINUM TRAIL CRASH BAR

