

Português:

Atenção – Seguir a sequência de montagem das fotos. Na fase de montagem não dar aperto aos parafusos que vamos aplicar ao longo da montagem.

- **Fotos 1 e 2:** Remover parafusos de origem nas posições **A** e **B**.
- **Fotos 3:** Remover parafusos de origem por trás do farol frontal na posição **C**.
- **Fotos 4:** Aplicar Crash Bar Direito na posição **D** com os itens Nº3 (Parafuso) e Nº6 (Anilha).
- **Fotos 5:** Aplicar o item Nº4 (Parafuso) na posição **E**.
- **Fotos 6:** Aplicar Crash Bar Esquerdo na posição **F** com os itens Nº2 (Parafuso) e Nº6 (Anilha).
- **Fotos 7:** Aplicar o item Nº1 (Parafuso) na posição **G**.
- **Fotos 8:** Aplicar os itens Nº5 (Anilha) e Nº7 (Porca Freada) na posição **H** no parafuso anteriormente aplicado na fixação de Inox.
- **Fotos 9:** Apertar todos os parafusos.

Français:

Attention - Suivez la séquence d'assemblage des photos. Pendant la phase de montage, ne serrez pas les vis que nous appliquerons tout au long de l'assemblage.



- **Photos 1 et 2:** Retirez les vis d'origine en positions **A** et **B**.
- **Photo 3:** Enlevez les vis d'origine derrière le phare en position **C**.
- **Photo 4:** Appliquez Crash Bar droit en position **D** avec les items Nº3 (Screw) et Nº6 (Washer).
- **Photo 5:** Appliquez l'item Nº4 (Screw) en position **E**.
- **Photo 6:** Appliquez Crash Bar Gauche en position **F** avec les items Nº2 (Screw) et Nº6 (Washer).
- **Photo 7:** Appliquez l'item Nº1 (Screw) en position **G**.
- **Photo 8:** Appliquez les items Nº5 (Washer) et Nº7 (Nut Nylock) en position **H** dans la vis précédemment appliquée dans la Inox Clamp.
- **Photo 9:** Serrer toutes les vis.



ALUMINUM TRAIL CRASH BAR
AJP PR7 650 ADVENTURE 2017-2017
Ref: 2CP1970040

CROSSPRO
PROTECTION PARTS



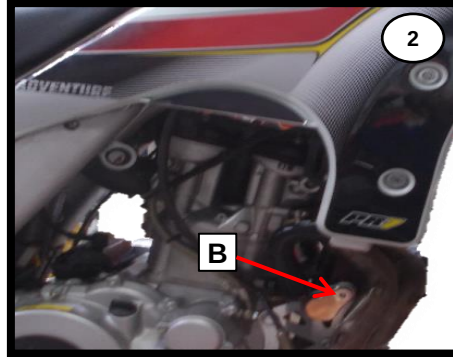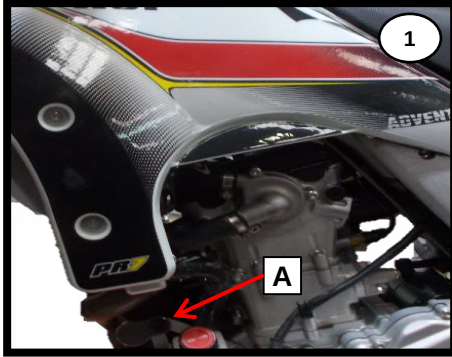

7	Porca Freada / Nut Nylock	M6 - DIN 985	1
6	Anilha / Washer	M10 - DIN 125	2
5	Anilha Aba Larga / Large Washer	M6 - DIN 9021	1
4	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M6x50 - DIN 6921	1
3	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x40 - DIN 912	1
2	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x30 - DIN 912	1
1	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

Assembly Sequence / Instrução de Montagem

English:

ATTENTION - Follow the assembly sequence of the photos. During the assembly phase do not tighten the screws that we will apply throughout the assembly.

- **Photos 1 and 2:** Remove original screws in positions **A** and **B**.
- **Photo 3:** Remove original screws behind the headlight in position **C**.
- **Photo 4:** Apply Right Crash Bar in position **D** with items Nº3 (Screw) and Nº6 (Washer).
- **Photo 5:** Apply item Nº4 (Screw) in position **E**.
- **Photo 6:** Apply Left Crash Bar in position **F** with items Nº2 (Screw) and Nº6 (Washer).
- **Photo 7:** Apply item Nº1 (Screw) in position **G**.
- **Photo 8:** Apply items Nº5 (Washer) and Nº7 (Nut Nylock) to position **H** in the screw previously applied in the stainless steel fastening.
- **Photo 9:** Tight all screws.

ALUMINUM TRAIL CRASH BAR AJP PR7 650 ADVENTURE 2017-2017

