


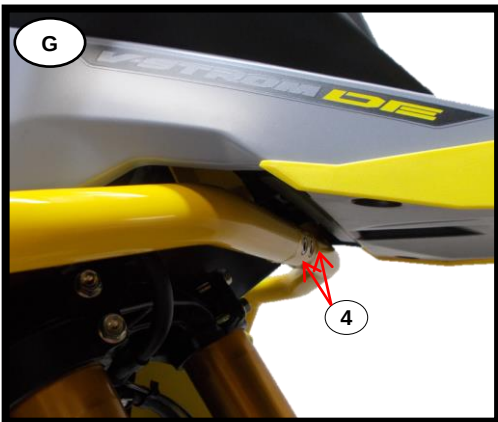

English:

- Apply item N°4 (Screw – x2) according to the photo.

Français:

- Appliquer l'item N°4 (Vis – x2) conforme à la photo.

Português:

- Aplicar o item N°4 (Parafuso – x2) de acordo com a foto.



English:

- Torque all screws to the correct value.

Français:

- Torque toutes les vis avec le bonne valeur.

Português:

- Apertar todos os parafusos com o valor correto de torque.



ALUMINUM TRAIL CRASH BAR

Ref.: 2CP1970093



N.m (TORQUE)		
	AÇO / STEEL	INOX
M4	2,7	0,8
M5	5,5	1,7
M6	9,7	3
M8	23	7,9
M10	47	14
M12	80	24

6	Carenagem Direita / Right Crashbar	R93	1
5	Carenagem Esquerda / Left Crashbar	L93	1
4	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	2
3	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M6x16 - DIN 6921	2
2	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M8x45 - ISO 7380	2
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M8x20 - ISO 7380	2
ITEM N°: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			



ID.022.02

www.crosspro.pt

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM



English:


- Remove OEM screw marked in the photo.

Français:

- Enlever les vis OEM marquée sur la photo.

Português:

- Remover parafuso OEM marcado na foto.

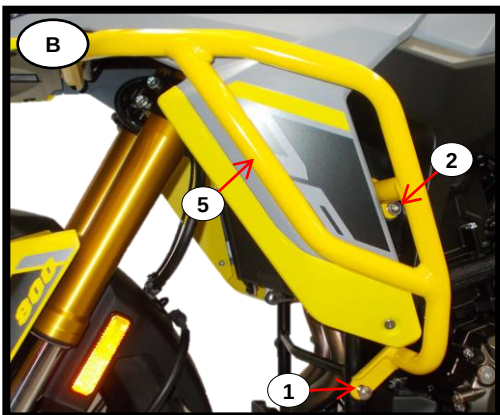

English:


- Apply item N°5 (Left Crash Bar - x1) according to the photo.

Français:

- Appliquer l'item N°5 (Crash Bar Gauche - x1) conforme à la photo.

Português:

- Aplicar o item N°5 (Carenagem Esquerda - x1) de acordo com a foto.

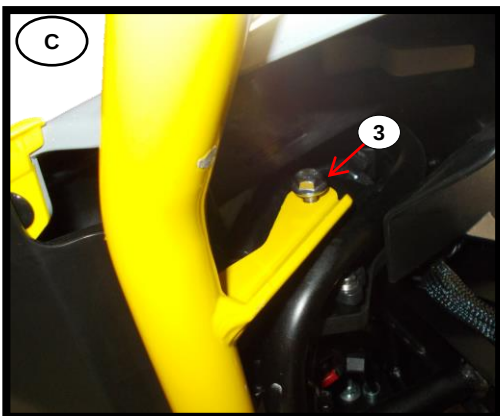

English:


- Apply item N°3 (Screw - x1) according to the photo.

Français:

- Appliquer l'item N°3 (Vis - x1) conforme à la photo.

Português:

- Aplicar o item N°3 (Parafuso - x1) de acordo com a foto.

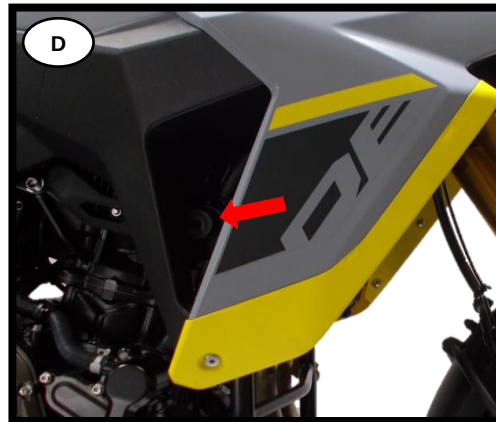

English:


- Remove OEM screw marked in the photo.

Français:

- Enlever les vis OEM marquée sur la photo.

Português:

- Remover parafuso OEM marcado na foto.

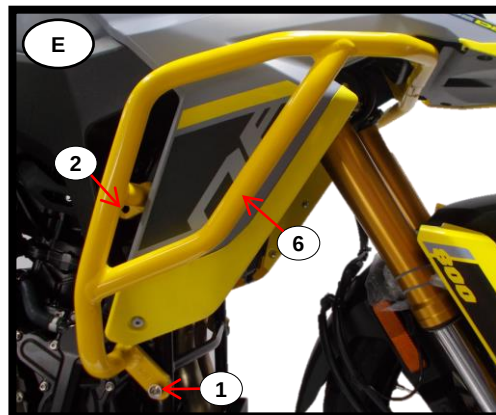

English:


- Apply item N°6 (Right Crash Bar - x1) according to the photo.

Français:

- Appliquer l'item N°5 (Crash Bar Droit - x1) conforme à la photo.

Português:

- Aplicar o item N°5 (Carenagem Direita - x1) de acordo com a foto.

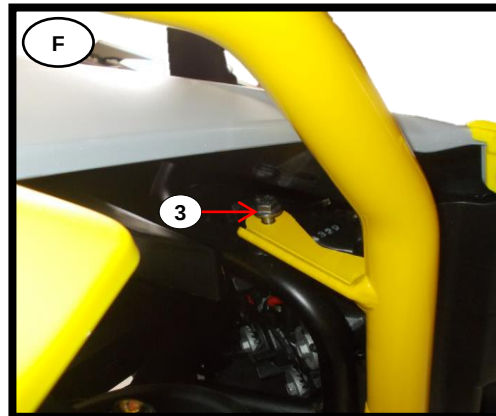

English:

- Apply item N°3 (Screw - x1) according to the photo.

Français:

- Appliquer l'item N°3 (Vis - x1) conforme à la photo.

Português:

- Aplicar o item N°3 (Parafuso - x1) de acordo com a foto.