

### Português:

**Atenção** – Seguir a sequência de montagem das fotos.

- **Foto A:** Aplicar item N°10 (Clamp Inox) com os itens N°4 (Screws), N°6 (Washers) e N°8 (Nuts Nylock) na posição **A1** na parte da frente da moto.
- **Foto B:** Remover parafusos de origem (**B1**) do lado esquerdo e do lado direito da moto.
- **Foto C:** Aplicar Aluminum Crash bar esquerdo com o item N°5 (Screw) (**C1**) e ajustar item N°3 (Screw) na posição **C2**.
- **Foto D:** Aplicar Aluminum Crash bar direito com os itens N°7 (Washer) and N°9 (Nut Nylock) (**D1**). Ajustar item N°2 (Screw) na posição **D2**.
- **Foto E / F:** Aplicar item N°1 (Screws).
- **Foto G / H:** Apertar parafusos na posição **G1** e **H1**.
- **Foto I:** Apertar os parafusos na posição **I1**.
- **Foto J:** Aplicar item N°11 (Top Plastic) na posição **J1**. Apertar todos os parafusos.

### Français:

**Attention:** Suivre le séquence de photos d'assemblage.





- **Photo A:** Appliquer item N°10 (Clamp Inox) avec items N°4 (Screws), N°6 (Washers) and N°8 (Nuts Nylock) (**A1**) l'avant de la moto.
- **Photo B:** Retirer les vis de origine (**B1**) le côté gauche et droit de la moto.
- **Photo C:** Appliquer Aluminium Crash bar gauche avec item N°5 (Screw) (**C1**) et régler item N°3 (Screw) position (**C2**).
- **Photo D:** Appliquer Aluminium Crash bar droit avec item N°7 (Washer) et N°9 (Nut Nylock) (**D1**). Régler item N°2 (Screw) position **D2**.
- **Photo E / F:** Appliquer item N°1 (Screws).
- **Photo G / H:** Serrer les vis position **G1** et **H1**.
- **Photo I:** Serrer les vis position **I1**.
- **Photo J:** Appliquer item N°10 (Top Plastic) position **J1**. Serrer toutes les vis.



## ALUMINUM TRAIL CRASH BAR

Ref: 2CP197028A

| Nm  | STAINLESS |       |
|-----|-----------|-------|
|     | STEEL     | STEEL |
|     | 8.8       | A2    |
| M4  | 2.7       | 2.6   |
| M5  | 5.5       | 5.1   |
| M6  | 9.7       | 8.7   |
| M8  | 23.0      | 21.2  |
| M10 | 47.0      | 42.0  |
| M12 | 80.0      | 73.0  |

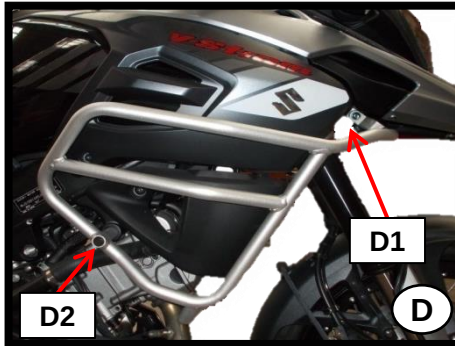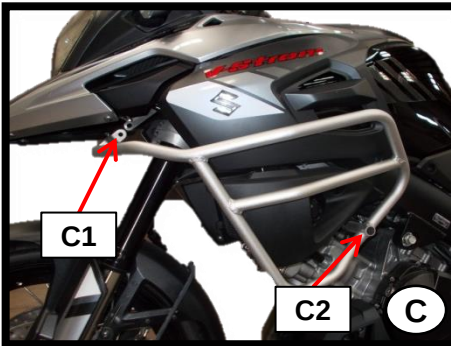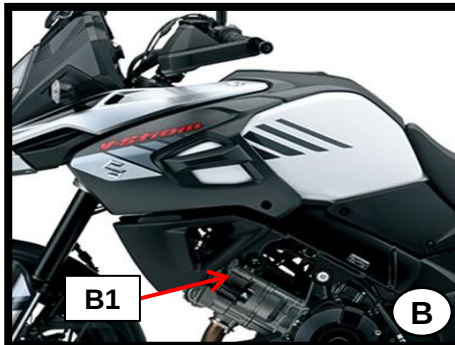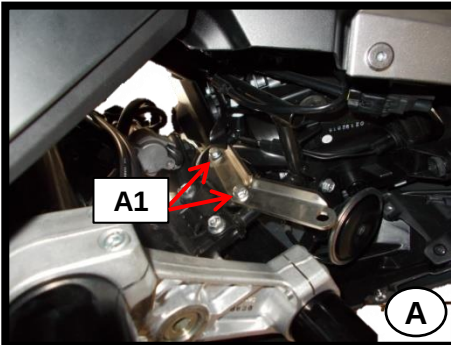

|                                  |                                                                             |                          |         |
|----------------------------------|-----------------------------------------------------------------------------|--------------------------|---------|
| 11                               | Topo Plástico / Top Plastic                                                 | Ø25 - REF.: 1040010001   | 2       |
| 10                               | Fixação Inox / Inox Clamp                                                   | Nº135                    | 1       |
| 9                                | Porca Freada / Nut Nylock                                                   | M8 - DIN 985             | 1       |
| 8                                | Porca Freada / Nut Nylock                                                   | M6 - DIN 985             | 2       |
| 7                                | Anilha / Washer                                                             | M8 - DIN 125             | 1       |
| 6                                | Anilha / Washer                                                             | M6 - DIN 125             | 2       |
| 5                                | Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False | M8x25 - ISO 7380         | 1       |
| 4                                | Paraf. Sext. Ext. c. FA / Hex Screw With Washer False                       | M6x16 - DIN 6921         | 2       |
| 3                                | Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw                 | M10x1,25x80              | 1       |
| 2                                | Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw                 | M10x1,25x60              | 1       |
| 1                                | Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw                 | M6x16 - DIN 912          | 4       |
| ITEM Nº: COMPONENTE (COMPONENT): |                                                                             | DESCRIÇÃO (DESCRIPTION): | QUANT.: |
| ACESSÓRIOS (ACCESSORIES)         |                                                                             |                          |         |

### Assembly Sequence / Instrução de Montagem

#### English:

**Attention** - Follow the installation sequence as you can see in the photos.

- **Photo A:** Apply item Nº10 (Clamp Inox) with items Nº4 (Screws), Nº6 (Washers) and Nº8 (Nuts Nylock) in position (A1) in front part of the motorcycle.
- **Photo B:** Remove original screws (B1) from the left and right side of motorcycle.
- **Photo C:** Apply Left Aluminum Crash bar with item Nº5 (Screw) (C1) and adjust item Nº3 (Screw) in position (C2).
- **Photo D:** Apply Right Aluminum Crash bar with items Nº7 (Washer) and Nº9 (Nut Nylock) (D1). Adjust item Nº2 (Screw) in position D2.
- **Photos E / F:** Apply item Nº1 (Screws).
- **Photo G / H:** Tight screw in positions G1 and H1.
- **Photo I:** Tight screws in position I1.
- **Photo J:** Apply item Nº11 (Top Plastic) in position J1. Tight all screws.

## ALUMINUM TRAIL CRASH BAR

