

Português:

Atenção – Seguir a sequência de montagem das fotos. Na fase de montagem não dar aperto aos parafusos que vamos aplicar ao longo da montagem.

- **Fotos 1 e 2:** Remover parafusos de origem nas posições **A** e **B**.
- **Fotos 3:** Remover parafusos de origem por trás do farol frontal na posição **C**.
- **Fotos 4:** Aplicar Crash Bar Direito na posição **D** com os itens Nº3 (Parafuso – x1) e Nº6 (Anilha – x1).
- **Fotos 5:** Aplicar o item Nº4 (Parafuso – x1) na posição **E**.
- **Fotos 6:** Aplicar Crash Bar Esquerdo na posição **F** com os itens Nº2 (Parafuso – x1) e Nº6 (Anilha – x1).
- **Fotos 7:** Aplicar o item Nº1 (Parafuso – x4) nas duas posições **G**.
- **Fotos 8:** Aplicar os itens Nº5 (Anilha – x1) e Nº7 (Porca Freada – x1) na posição **H** no parafuso anteriormente aplicado na fixação de Inox.

Apertar todos os parafusos.

Français:

Attention - Suivez la séquence d'assemblage des photos. Pendant la phase de montage, ne serrez pas les vis que nous appliquerons tout au long de l'assemblage.

- **Photos 1 et 2:** Retirez les vis d'origine en positions **A** et **B**.
- **Photo 3:** Enlevez les vis d'origine derrière le phare en position **C**.
- **Photo 4:** Appliquez Crash Bar droit en position **D** avec les items Nº3 (Vis – x1) et Nº6 (Rondelle – x1).
- **Photo 5:** Appliquez l'item Nº4 (Vis – x1) en position **E**.
- **Photo 6:** Appliquez Crash Bar Gauche en position **F** avec les items Nº2 (Vis – x1) et Nº6 (Rondelle – x1).
- **Photo 7:** Appliquez l'item Nº1 (Vis – x4) dans les deux positions **G**.
- **Photo 8:** Appliquez les items Nº5 (Rondelle – x1) et Nº7 (Écrou de Frein – x1) en position **H** dans la vis précédemment appliquée dans la Inox Clamp.

Serrer toutes les vis.





ALUMINUM TRAIL CRASH BAR

Ref.: 2CP197040B

CROSSPRO
PROTECTION PARTS

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

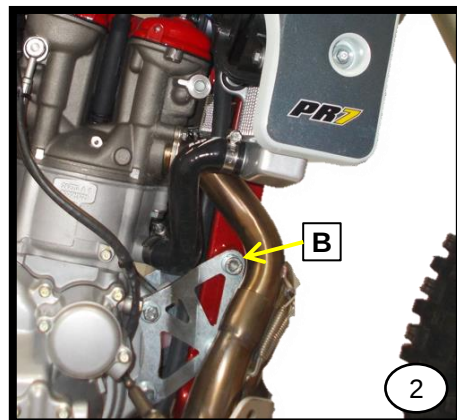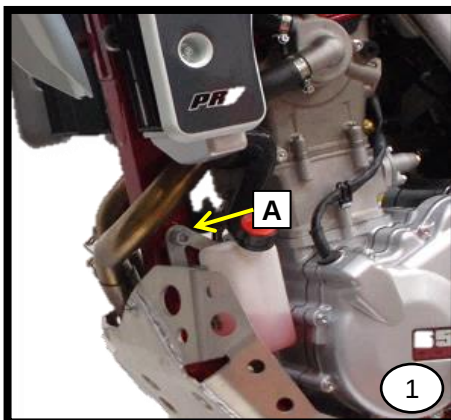

7	Porca Freada / Nut Nylock	M6 - DIN 985	1
6	Anilha / Washer	M10 - DIN 125	2
5	Anilha Aba Larga / Large Washer	M6 - DIN 9021	1
4	Paraf. Sext. Ext. c. FA / Hex Screw With Washer False	M6x50 - DIN 6921	1
3	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x40 - DIN 912	1
2	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M10x1,5x30 - DIN 912	1
1	Paraf. Cabeça Cilíndrica Sext. Int. / Socket Head Cap Screw	M6x16 - DIN 912	4
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:

ACESSÓRIOS (ACCESSORIES)

English:

ATTENTION - Follow the assembly sequence of the photos. During the assembly phase do not tighten the screws that we will apply throughout the assembly.

• **Photos 1 and 2:** Remove original screws in positions **A** and **B**.

• **Photo 3:** Remove original screws behind the headlight in position **C**.

• **Photo 4:** Apply Right Crash Bar in position **D** with items Nº3 (Screw – x1) and Nº6 (Washer – x1).

• **Photo 5:** Apply item Nº4 (Screw – x1) in position **E**.

• **Photo 6:** Apply Left Crash Bar in position **F** with items Nº2 (Screw – x1) and Nº6 (Washer – x1).

• **Photos 7:** Apply item Nº1 (Screw – x4) in the two positions **G**.

• **Photo 8:** Apply items Nº5 (Washer – x1) and Nº7 (Nut Nylock – x1) to position **H** in the screw previously applied in the stainless steel fastening.

Tight all screws.

ALUMINUM TRAIL CRASH BAR

