

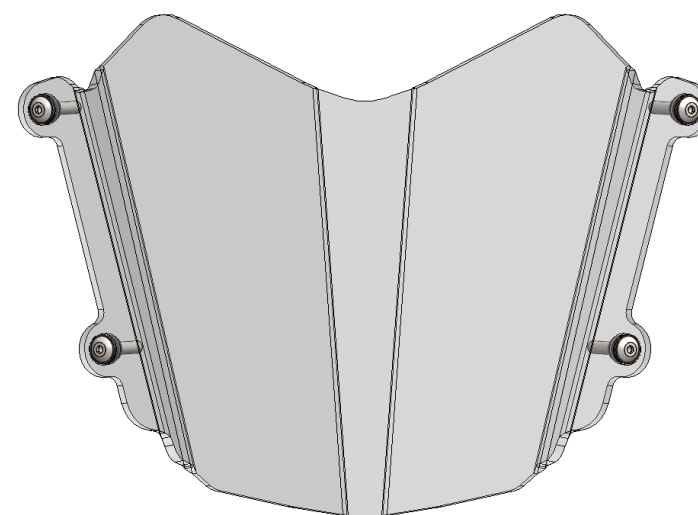


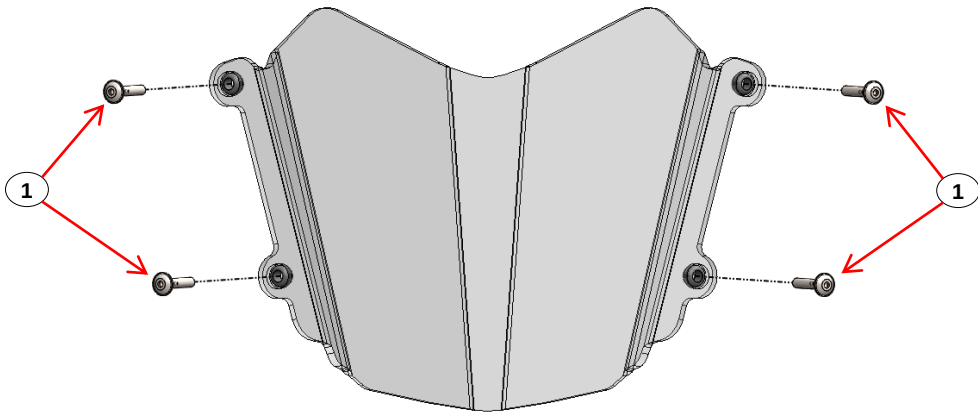



**POLYCARBONATE HAED
LIGHT PROTECTOR**
Ref.: 2CP2210082

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

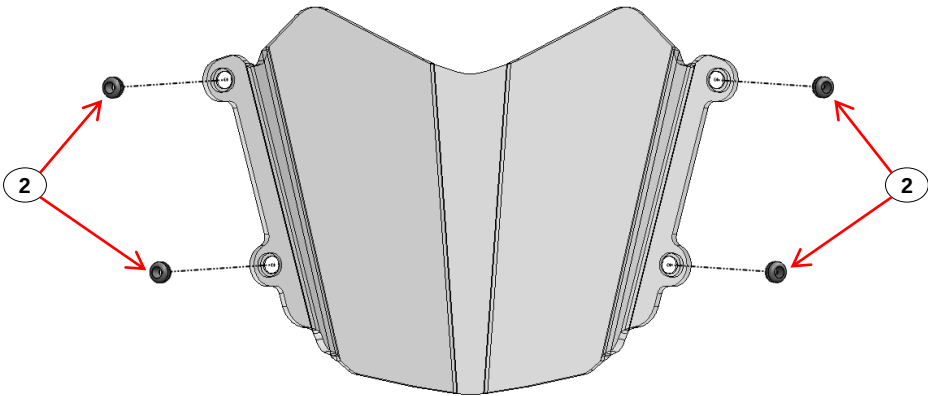

2	Anilha Especial Borracha (Wurth) / Special Rubber Washer (Wurth)	Ref.: 05616632 005 25	4
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M5x25 - ISO 7380	4
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

POLYCARBONATE HEAD LIGHT PROTECTOR

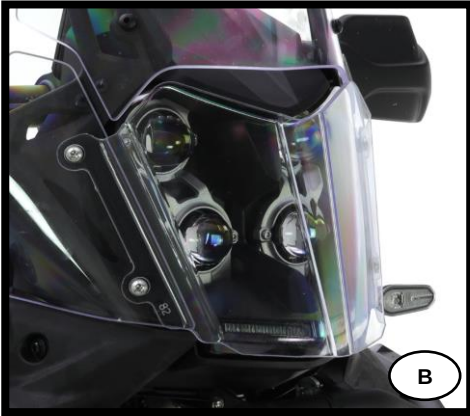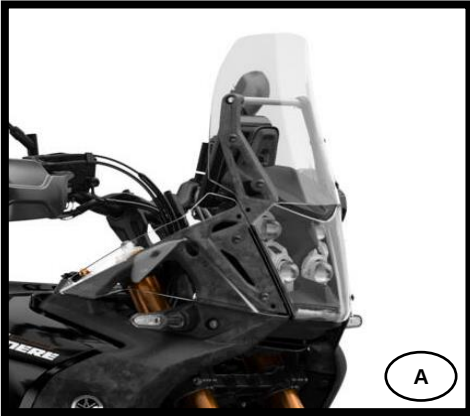

English:

Attention – Follow the assembly instruction sequence.

Apply Item Nº2 (x4) in the four fixing holes of the headlight protection.

- **Photo A:** Remove the four original screws that support the two side deflectors – **Attention: Do not remove the two deflectors.**
- **Photo B:** Apply the headlight protection over the deflectors, use item Nº1 (x4).

Português:

Atenção – Siga a sequência de instrução de montagem.

Aplicar o item Nº2 (x4) nos quatro furos de fixação da proteção de farol.

- **Foto A:** Remover os quatro parafusos de origem que suportam os dois defletores laterais - **Atenção: Não remover os dois defletores.**
- **Foto B:** Aplicar a proteção de Farol por cima dos defletores, utilizar Item Nº1 (x4).

Français:

Attention - Suivez la séquence d'instructions d'assemblage.

Appliquer l'item Nº2 (x4) dans les quatre trous de fixation de la protection de phare,

- **Photo A:** Retirer les quatre vis d'origine qui supportent le deux déflecteurs latéraux – **Attention: Ne retirez pas les deux déflecteurs.**
- **Photo B:** Appliquez la protection de phare sur les déflecteurs, utiliser Item Nº1 (x4).