


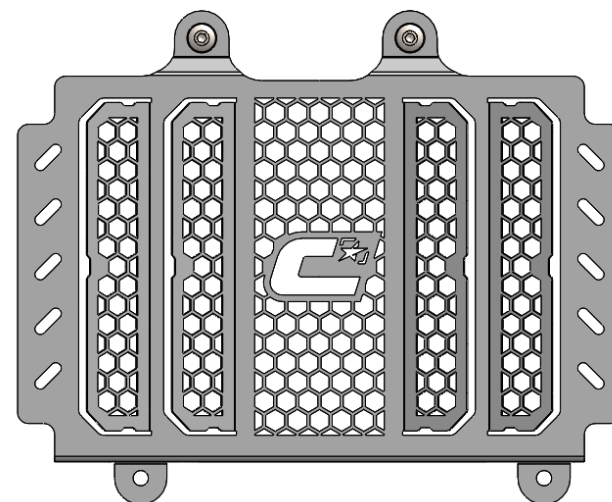



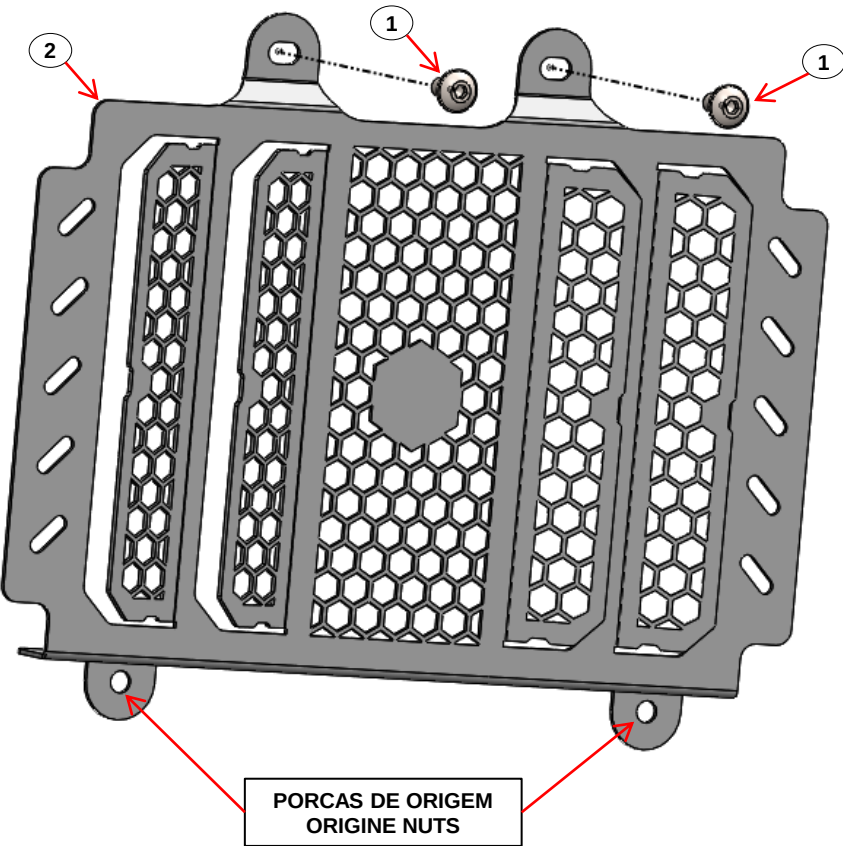

FRONT RADIATOR GUARD
Ref.: 2CP2270080

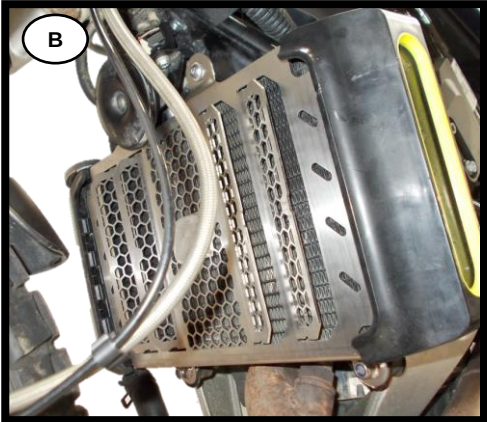

2	Radiador Inox / Inox Radiator	Nº81	1
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x12 - ISO 7380	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

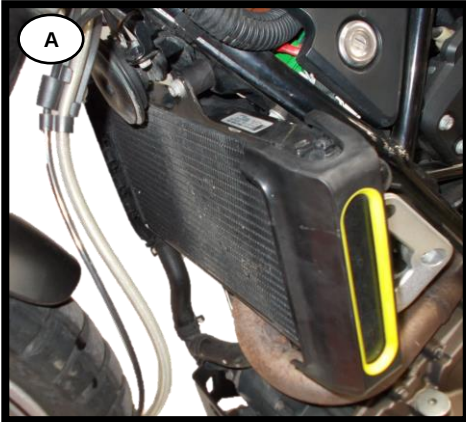

English:

Attention - Follow the installation sequence has you can see in the photos.

- **Photo A:** Remove horn. Remove radiator screws and nuts.
- **Photo B:** Mount radiator protection with origine Nuts and item N°1 (Screw – x2). Tight all screws and mount horn.

Português:

Atenção – Seguir a sequência de montagem que pode ver nas fotos.

- **Foto A:** Remover buzina. Remover parafusos e porcas do radiador.
- **Foto B:** Montar proteção de radiador com Porcas de origem e o item N°1 (Parafuso – x2). Apertar todos os parafusos e montar buzina.

Français:

Attention - Suivre le séquence de photos d'assemblage.

- **Photo A:** Retirer le klaxon. Retirer les vis et écrous du radiateur.
- **Photo B:** Assemblez la protection du radiateur avec les écrous d'origine et l'item N°1 (Vis – x2). Serrer toutes les vis et assemblez le klaxon.