

Português:

Atenção – Seguir a sequência de montagem que pode ver nas fotos.

- **Foto A:** Remover parafusos de origem marcados na foto (2x).
- **Fotos B e C:** Desapertar parafusos (2x) mas sem remover para montar proteção como na moto.

Atenção: posicionar radiador de acordo com a foto.

- **Foto D:** Aplicar parafusos de origem (x2).

Apertar todos os parafusos com o valor correto de torque.

Français:


Attention: Suivez la séquence d'installation que vous pouvez voir sur les photos.

- **Photo A:** Enlever les vis d'origine marquées sur la photo (2x).
- **Photos B and C:** Dévisser les vis (x2) mais ne pas les retirer pour monter la protection comme sur la photo.

Attention: positionner le radiateur selon la photo.

- **Photo D:** Appliquer les vis d'origine.



Torque toutes les vis avec le bonne valeur.

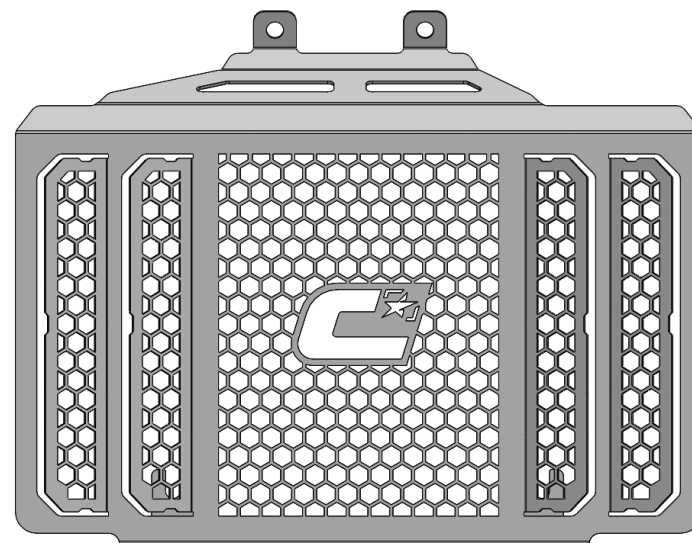

FRONT RADIATOR GUARD





Ref.: 2CP2270083

CROSSPRO
PROTECTION PARTS

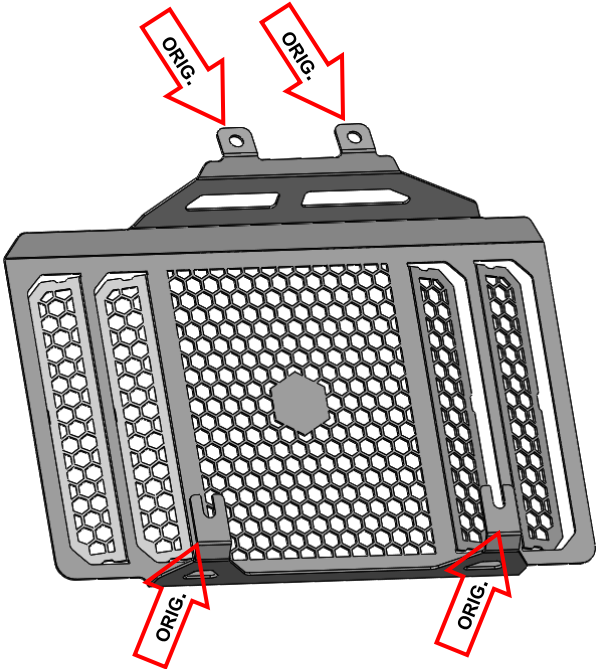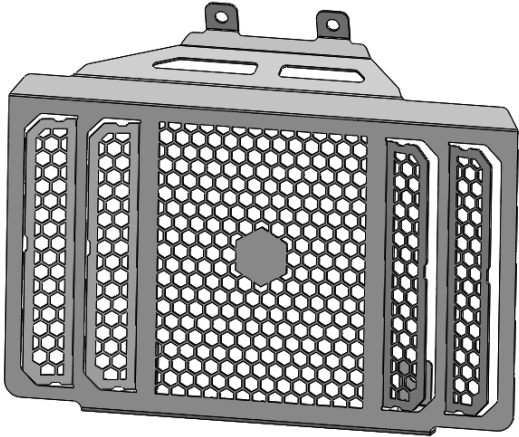

N.m (TORQUE)		
	AÇO / STEEL	INOX
M4	2,7	0,8
M5	5,5	1,7
M6	9,7	3
M8	23	7,9
M10	47	14
M12	80	24

FRONT RADIATOR GUARD

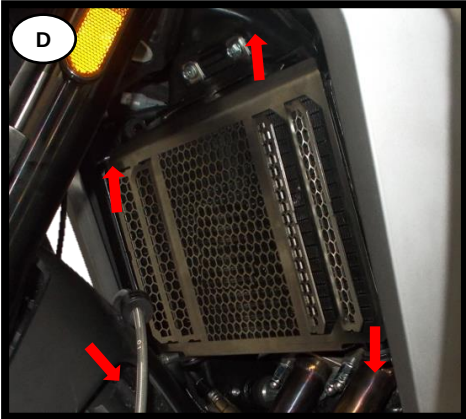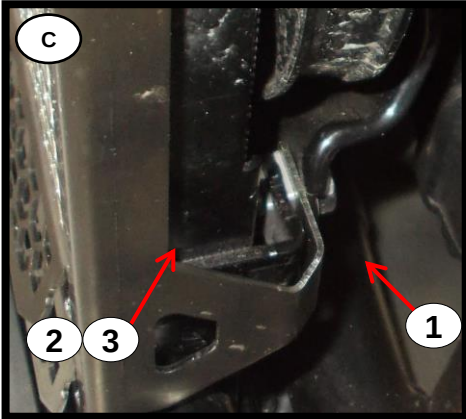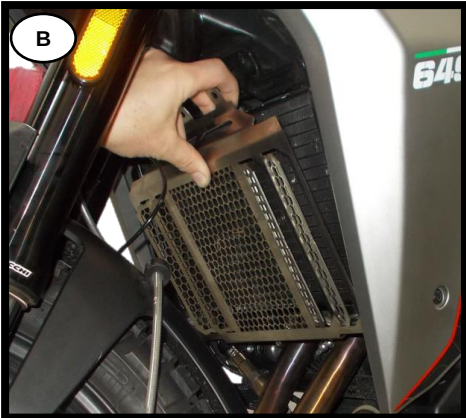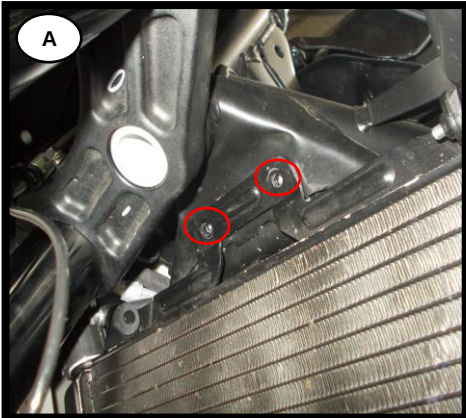

English:
Attention: Follow the installation sequence as you can see in the photos.
• **Photo A:** Remove origin screws marked in the photo (2x).
• **Photos B and C:** Unscrew screws (x2) but do not remove to assemble protection as the photo.
Attention: position the radiator according to the photo.
• **Photo D:** Apply origin screws (x2).
Torque all screws to the correct value.