

Português:

Atenção – Seguir a sequência de montagem que pode ver nas fotos.

- **Fotos A e B:** Remover parafusos de origem marcados na foto.
- **Foto C:** Aplicar o item N°2 (Mola de Friso – x2) no item N°4 (Fixação Inox – x1) e montar na moto com o parafuso de origem.
- **Foto D:** Montar Proteção Frontal de Radiador (item N°5) como a instrução de montagem.


Apertar todos os parafusos.

Français:

Attention: Suivez la séquence d'installation que vous pouvez voir sur les photos.

- **Photos A et B:** Enlever les vis d'origine marqué sur la photo.
- **Photo C:** Appliquer l'item N°2 (Inox Clip – x2) sur l'item N°4 (Fixation Inox – x1) et monter sur la moto avec le vis d'origine.
- **Photo D:** Assemblez la Protection du Radiateur Avant (item N°5) conformément aux instructions de montage.

Serrer toutes les vis.

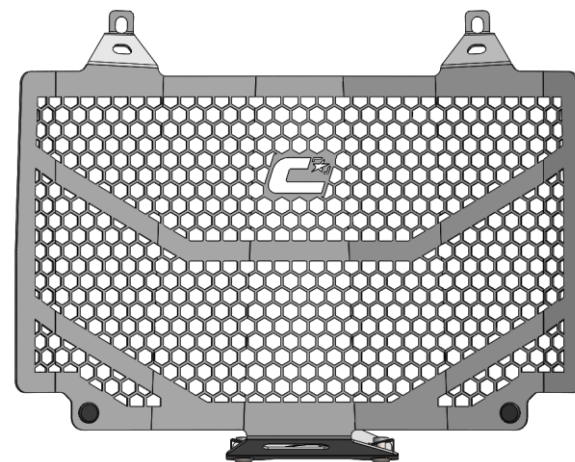


FRONT RADIATOR GUARD



Ref.: 2CP2270088

CROSSPRO
PROTECTION PARTS

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM




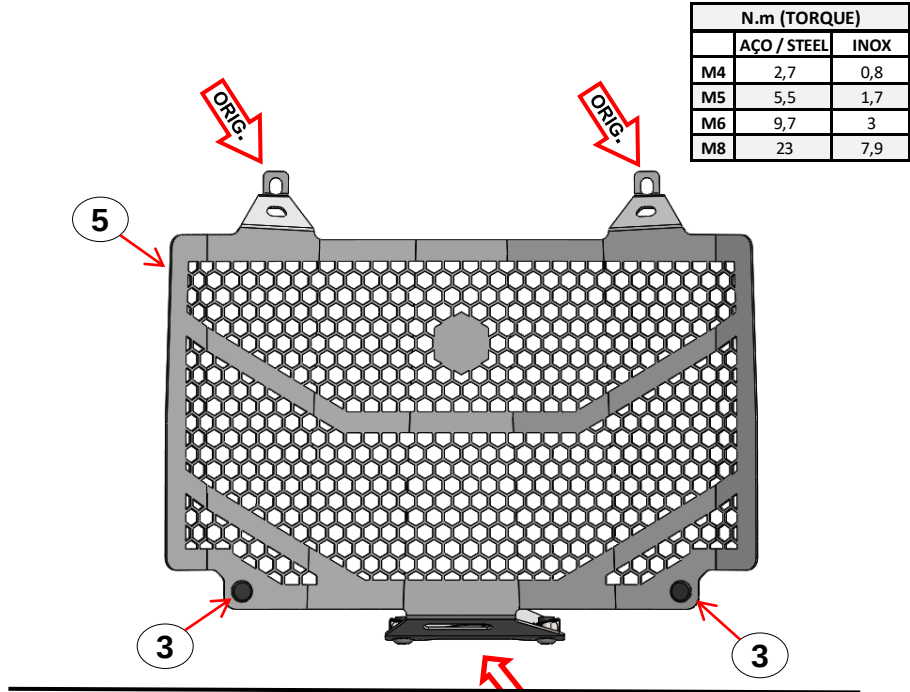


N.m (TORQUE)		
	AÇO / STEEL	INOX
M4	2,7	0,8
M5	5,5	1,7
M6	9,7	3
M8	23	7,9

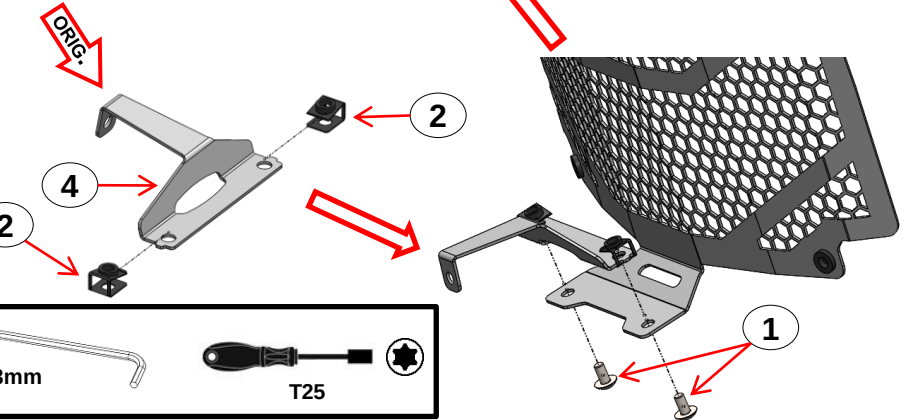

5	Proteção Frontal de Radiador / Front Radiator Guard	Nº88	1
4	Fixação Inox / Inox Clamp	Nº88-1	1
3	Batente Borracha / Rubber Cap	056118	2
2	Mola de Friso / Inox Clip	M5	2
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M5x10 - ISO 7380	2
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

FRONT RADIATOR GUARD

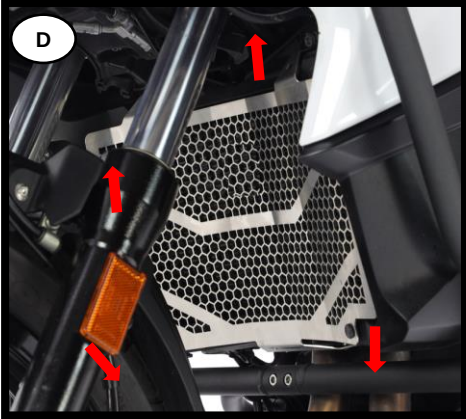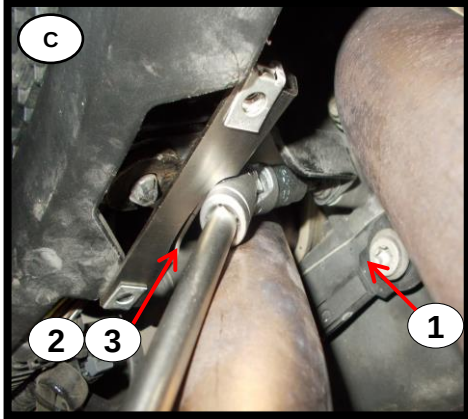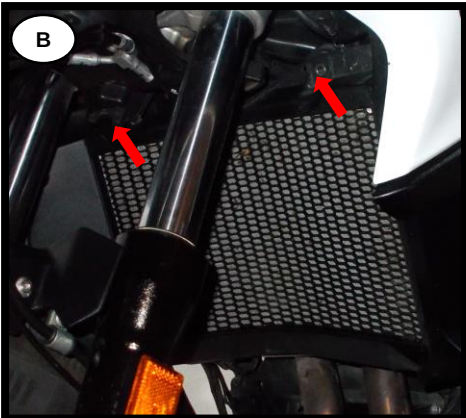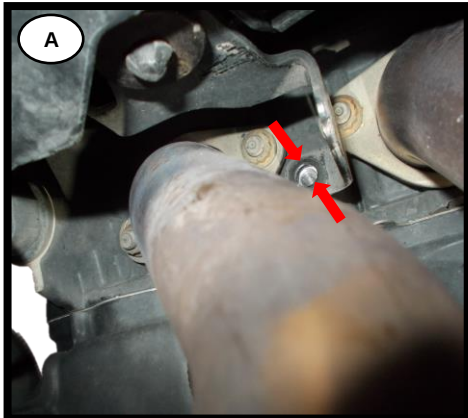

English:

Attention: Follow the installation sequence as you can see in the photos.

- **Photos A and B:** Remove origin screws marked in the photo.
 - **Photo C:** Apply item N°2 (Inox Clip – x2) on item N°4 (Inox Clamp – x1) and mount on the motorcycle with origin screw.
 - **Photo D:** Assemble Front Radiator Guard (item N°5) as the assembly instruction.
- Tight all screws.**