



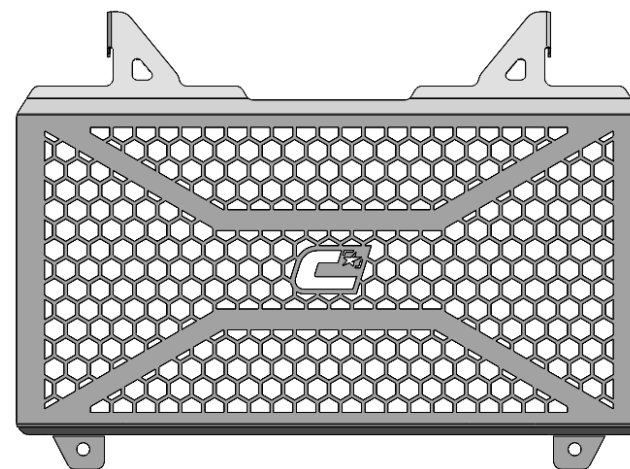


FRONT RADIATOR GUARD

Ref.: 2CP2270093



CROSSPRO
PROTECTION PARTS

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM

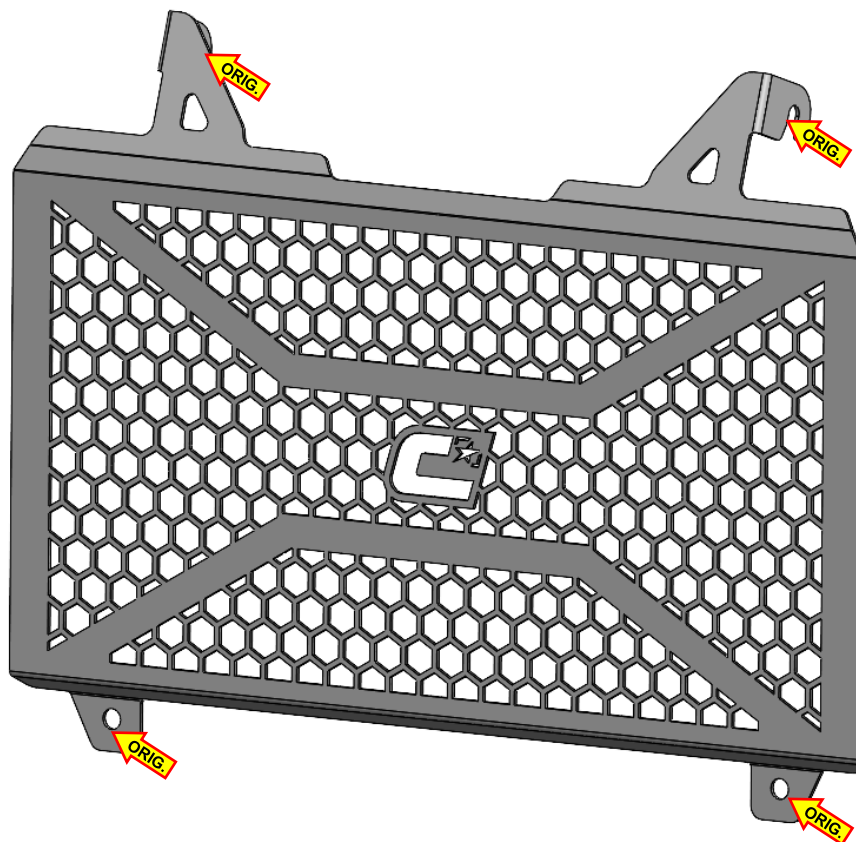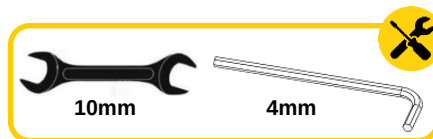

N.m (TORQUE)		
	AÇO / STEEL	INOX
M4	2,7	0,8
M5	5,5	1,7
M6	9,7	3
M8	23	7,9

FRONT RADIATOR GUARD

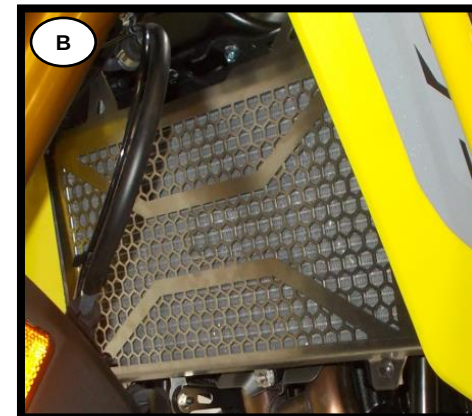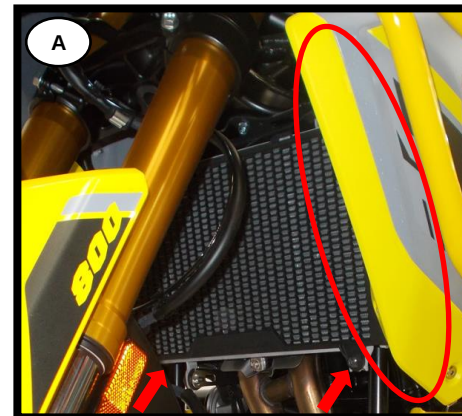

English:

Attention: Follow the installation sequence as you can see in the photos.

- **Photo A:** Remove side plastics and OEM screws marked in the photo to remove OEM radiator protection.
- **Photo B:** Mount Front Radiator Guard as the assembly instruction and reassemble the side plastics.

Torque all screws to the correct value.

Português:

Atenção – Seguir a sequência de montagem que pode ver nas fotos.

- **Foto A:** Remover plásticos laterais e parafusos OEM assinalados na foto para remover proteção de radiador OEM.
- **Foto B:** Montar a Proteção Frontal de Radiador como a instrução de montagem e voltar a montar plásticos laterais.

Apertar todos os parafusos com o valor correto de torque.

Français:

Attention: Suivez la séquence d'installation que vous pouvez voir sur les photos.

- **Photo A:** Retirer les plastiques latéraux et les vis OEM marqué sur la photo pour enlever la protection de radiateur OEM.
- **Photo B:** Appliquer Front Radiator Guard conformément aux instructions de montage et remonter les plastiques latéraux.

Torque toutes les vis avec le bonne valeur.