



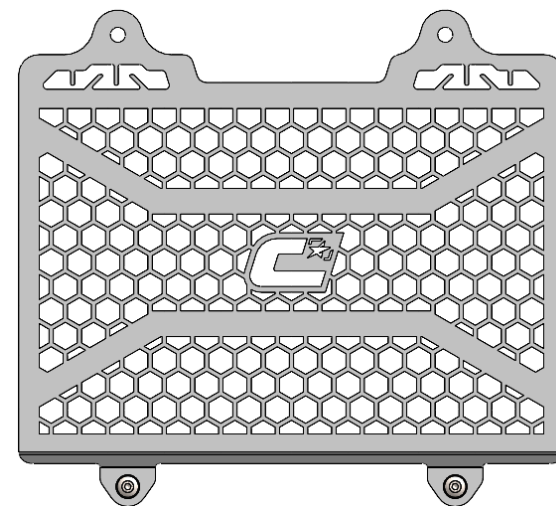

FRONT RADIATOR GUARD
Ref.: 2CP227056A

CROSSPRO
PROTECTION PARTS

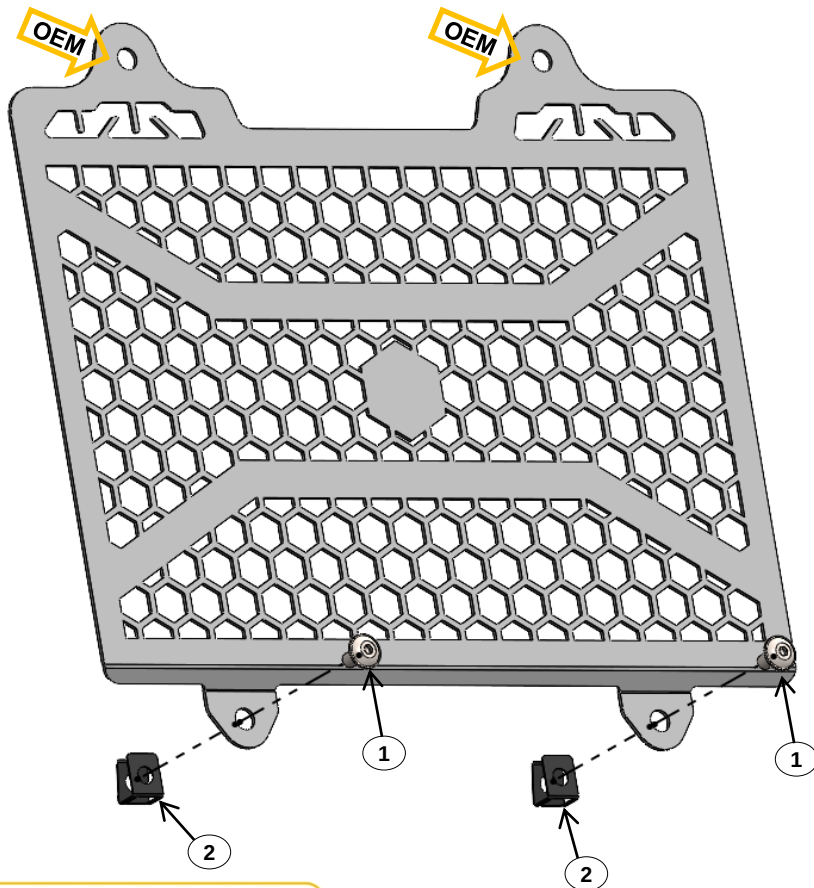

N.m		M4	M5	M6	M8	M10	M12
STEEL	8.8	2.7	5.5	9.7	23.0	47.0	80.0
STAINLESS STEEL	A2	2.6	5.1	8.7	21.2	42.0	73.0





2	Mola de Friso / Stainless Steel Clip	M5	2
1	Parafuso com FA FA / Screw with Washer False	M5x10 ISO7380 - A2	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention: Follow the installation sequence as you can see in the photos.

- **Photo A:** Remove OEM screws (x2).
- **Photo B:** Apply item N°2 (Clip Inox – x2) (marked in the photo).
- **Photo C:** Mount protection on the motorcycle frame with OEM screws (x2) on top part and item N°1 (Screw – x2) on the bottom part.
- **Photo D:** Torque all screws to the correct value..

FRONT RADIATOR GUARD

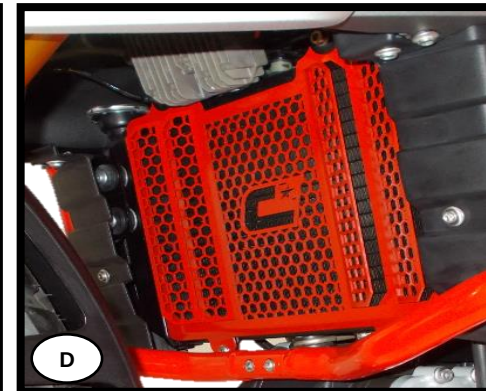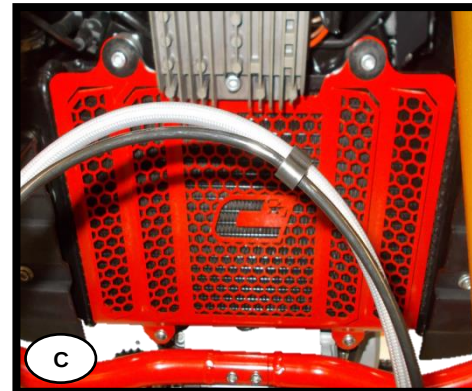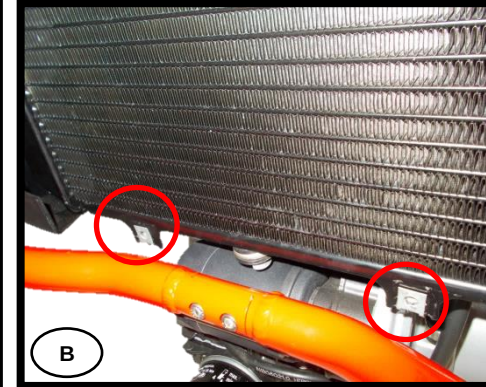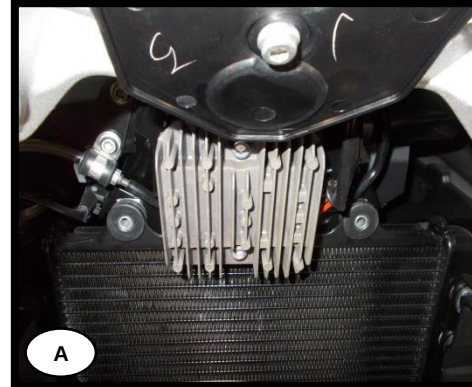

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto A:** Remover parafusos OEM (x2).
- **Foto B:** Aplicar o item N°2 (Mola de Friso – x2) (Marcado na foto).
- **Foto C:** Montar proteção no quadro da moto com parafusos OEM (x2) na parte de cima e o item N°1 (Parafuso – x2) na parte de baixo.
- **Foto D:** Apertar todos os parafusos com o valor correto de torque.

Français:

Attention: Suivre le séquence de photos d'assemblage.

- **Photo A:** Retirer les vis OEM (x2).
- **Photo B:** Appliquer l'item N°2 (Clip Inox – x2) (marquée sur la photo).
- **Photo C:** Monter la protection sur la moto avec les vis OEM en haut et l'item N°1 (Vis – x2) en bas.
- **Photo D:** Torque toutes les vis avec le bonne valeur.