



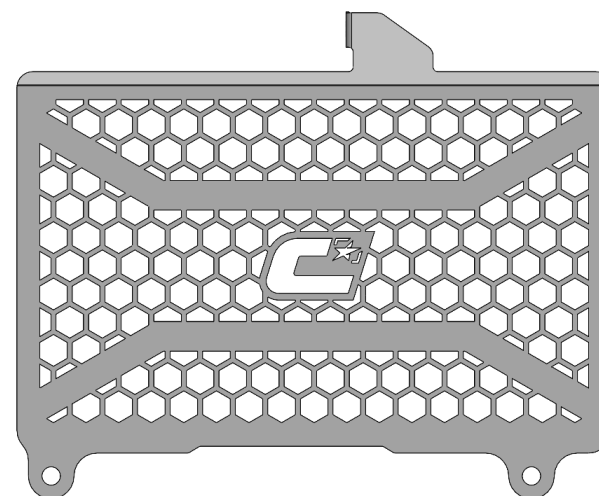

FRONT RADIATOR GUARD
Ref.: 2CP227057A

ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

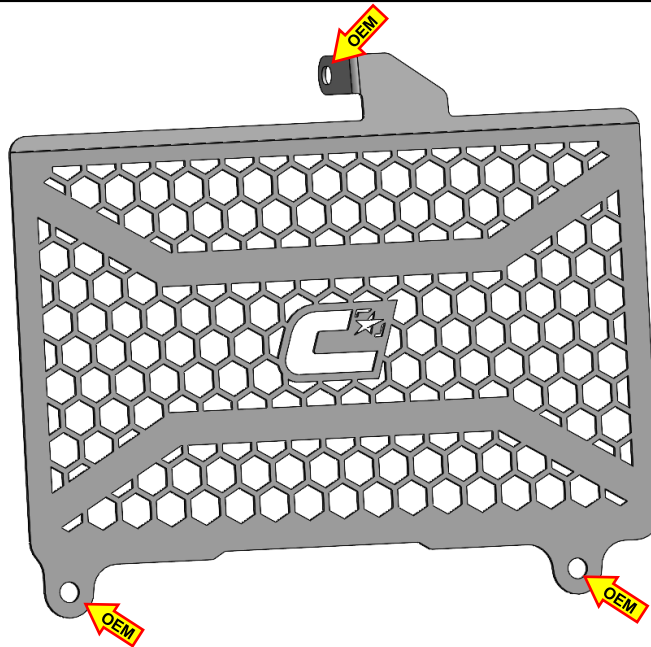

N.m	M4	M5	M6	M8	M10	M12
STEEL 8.8	2.7	5.5	9.7	23.0	47.0	80.0
STAINLESS STEEL A2	2.6	5.1	8.7	21.2	42.0	73.0

English:

Attention: Follow the installation sequence as you can see in the photos.

- **Photos A and B:** Remove OEM screws marked in the photo.
- **Photo C:** Mount protection with OEM screw (x1).
- **Photo D:** Apply OEM screws (x2).
- **Photo E and F:** Torque all screws to the correct value.

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Fotos A e B:** Remover os parafusos OEM marcados na foto.
- **Foto C:** Montar proteção com parafuso OEM (x1).
- **Foto D:** Aplicar parafusos OEM (x2).
- **Foto E e F:** Apertar todos os parafusos com o valor correto de torque.

Français:

Attention: Suivre la séquence de photos d'assemblage.

- **Photos A et B:** Retirer vis OEM marqué sur la photo.
- **Photo C:** Monter protection avec vis OEM (x1).
- **Photo D:** Appliquer les vis OEM (x2).
- **Photo E et F:** Torque toutes les vis avec le bonne valeur.

FRONT RADIATOR GUARD

