



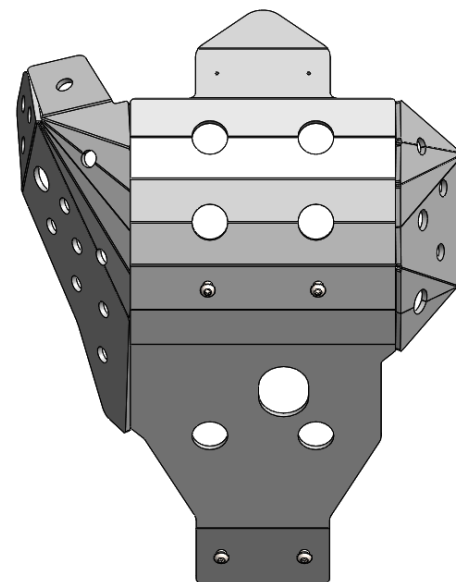


ALUMINUM EC ENGINE GUARD
Ref: 2CP0590192

CROSSPRO
PROTECTION PARTS



ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

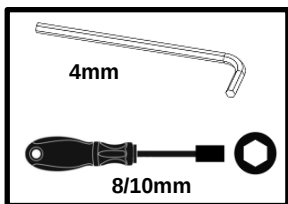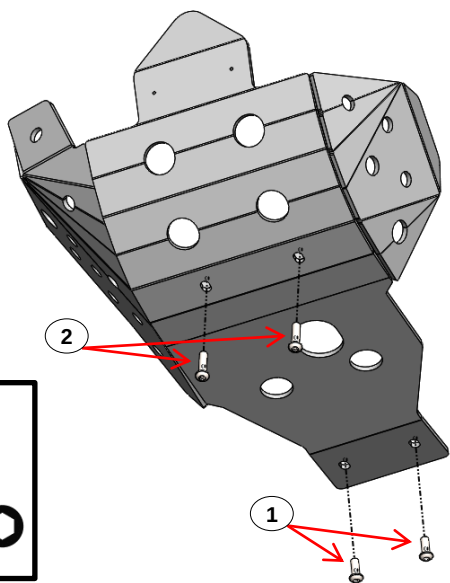

3	Tira Protetora / Protective Strip	1 Mt.	1
2	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x30 - ISO 7380	2
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x16 - ISO 7380	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention – Follow the assembly instruction sequence as you can see in the photos.

Aluminum Engine protection part and kit of components. Apply item N°3 (Protective Strip – x1) on the insides of the central part of the protection in order to stay between the frame of the bike and the aluminum protection.

- **1st Photo:** Mount protection first rear part with item N°1 (Screw – x2).
- **2nd Photo:** Apply item N°2 (Screw – x2) on the front part of the protection.
- **3rd / 4th Photos:** Tight all screws.

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

Proteção de motor em alumínio e kit de componentes. Aplicar item N°3 (Tira Protetora – x1) no interior da parte central da proteção de forma a ficar entre a proteção de alumínio e o quadro da moto.

- **1º Foto:** Montar a proteção na moto iniciando pela parte de trás com o item N°1 (Parafuso – x2).
- **2º Foto:** Aplicar o item N°2 (Parafuso – x2) na parte da frente da proteção.
- **3º / 4º Fotos:** Apertar todos os parafusos.

ALUMINUM EC ENGINE GUARD



Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.

Protection de Moteur en Aluminium et kit de composants. Appliquer l'item N°3 (Protective Strip – x1) sur l'intérieur de la partie centrale de la protection afin de rester entre le châssis de la moto et la protection en aluminium.

- **1er Photo:** Monter la protection sur la moto première partie arrière avec l'item N°1 (Vis – x2).
- **2er Photo:** Appliquer l'item N°2 (Vis – x2) sur la partie avant de la protection.
- **3er Photo:** Serrer toutes les vis.

