


Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.

Enlever protection d'origine. Appliquer l'item N°7 (Bande de Protection – x1) sur l'intérieur de la partie centrale de la protection afin de rester entre le châssis de la moto et la protection en aluminium.

- **1er Photo:** Appliquer l'item N°6 (Fixation DTC – x1) sur la partie arrière de la protection avec l'item N°2 (Vis Spéciale DTC – x2). Monter la protection sur la moto première partie arrière.
- **2er Photo:** Appliquer l'item N°1 (Vis – x2) sur la partie avant de la protection sur le cadre de la moto.
- **ATTENTION:** Si le cadre n'a pas de trous, appliquer l'item N°5 (Inox Clamp) comme instruction de montage.
- **3er / 4er Photos:** Torque toutes les vis avec la bonne valeur.

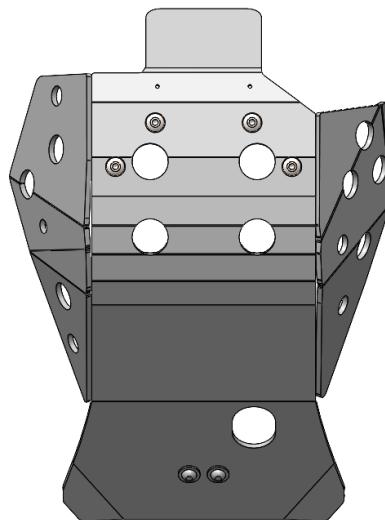


ALUMINUM EC ENGINE GUARD
Ref.: 2CP059202A

CROSSPRO
PROTECTION PARTS



ASSEMBLY SEQUENCE / INSTRUÇÃO DE MONTAGEM

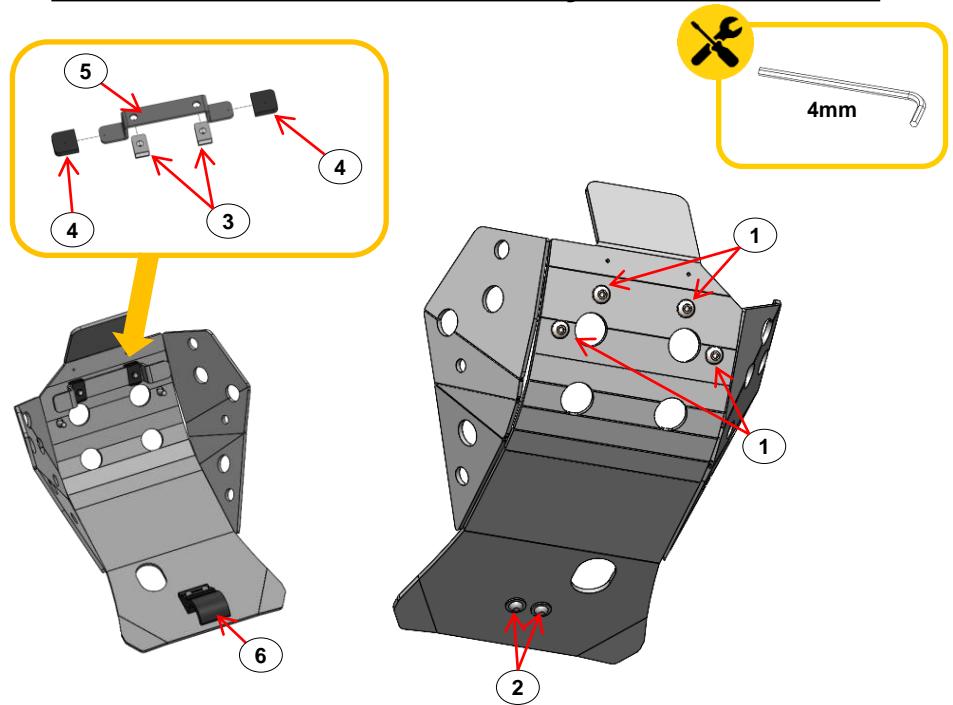

ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIPÇÃO (DESCRIPTION):	QUANT.:
7	Tira Protetora / Protective Strip	1 Mt.	1
6	Fixação DTC / DTC Clamp	Nº93A	1
5	Fixação Inox / Inox Clamp	Nº116	1
4	Cápsula de Borracha / Rubber Cap	.	2
3	Mola de Friso / Clip Inox	M6	2
2	Paraf. Especial DTC / Special DTC Screw	7x25	2
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x16 - ISO 7380	4
ITEM Nº: COMPONENTE (COMPONENT):		ACESÓRIOS (ACESSORIES)	

English:

Attention – Follow the assembly instruction sequence has you can see in the photos.

Remove original protection. Apply item N°7 (Protective Strip – x1) on the insides of the central part of the protection in order to stay between the frame of the bike and the aluminum protection.





- **1st Photo:** Apply item N°6 (DTC Clamp – x1) in the rear part of the protection with item N°2 (Special DTC Screw – x2). Mount protection on the motorcycle frame first rear part.

- **2nd Photo:** Apply item N°1 (Screw – x2) on the front part of the protection on the motorcycle frame.

ATTENTION: If the frame does not have a hole, apply item N°5 (Inox Clamp) as the assembly instruction.

- **3rd / 4th Photos:** Torque all screws to correct value.

ALUMINUM EC ENGINE GUARD

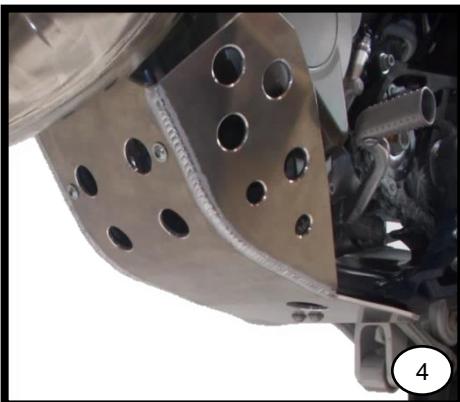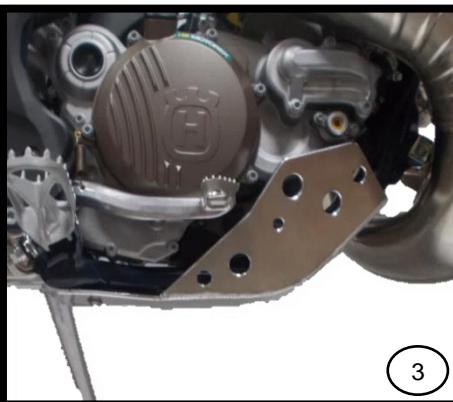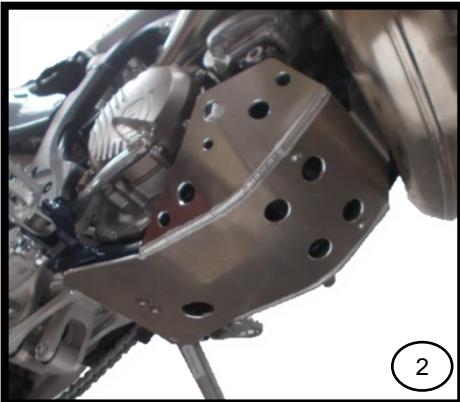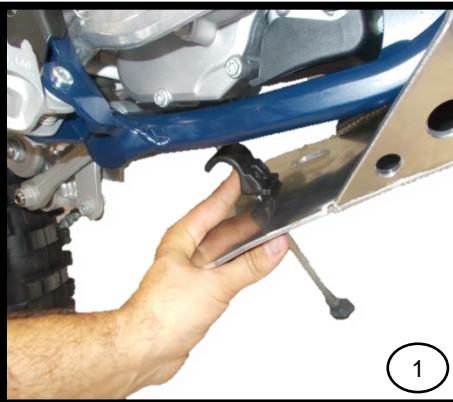

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

Remover proteção de origem. Aplicar item N°7 (Tira Protetora – x1) no interior da parte central da proteção de forma a ficar entre a proteção de alumínio e o quadro da moto.

- **1º Foto:** Aplicar o item N°6 (Fixação DTC – x1) na parte de trás da proteção com o item N°2 (Parafuso Especial DTC – x2). Montar proteção na moto iniciando pela parte de trás.

- **2º Foto:** Aplicar o item N°1 (Parafuso – x2) na parte da frente da proteção.

ATENÇÃO: Se o quadro não tiver furação aplicar o item N°5 (Inox Clamp) como a instrução de montagem.

- **3º / 4º Fotos:** Apertar todos os parafusos com o valor correto de torque.