


[illegible]

Radiator Guard
TM 250 FI 2015
Ref: 2CP0600148

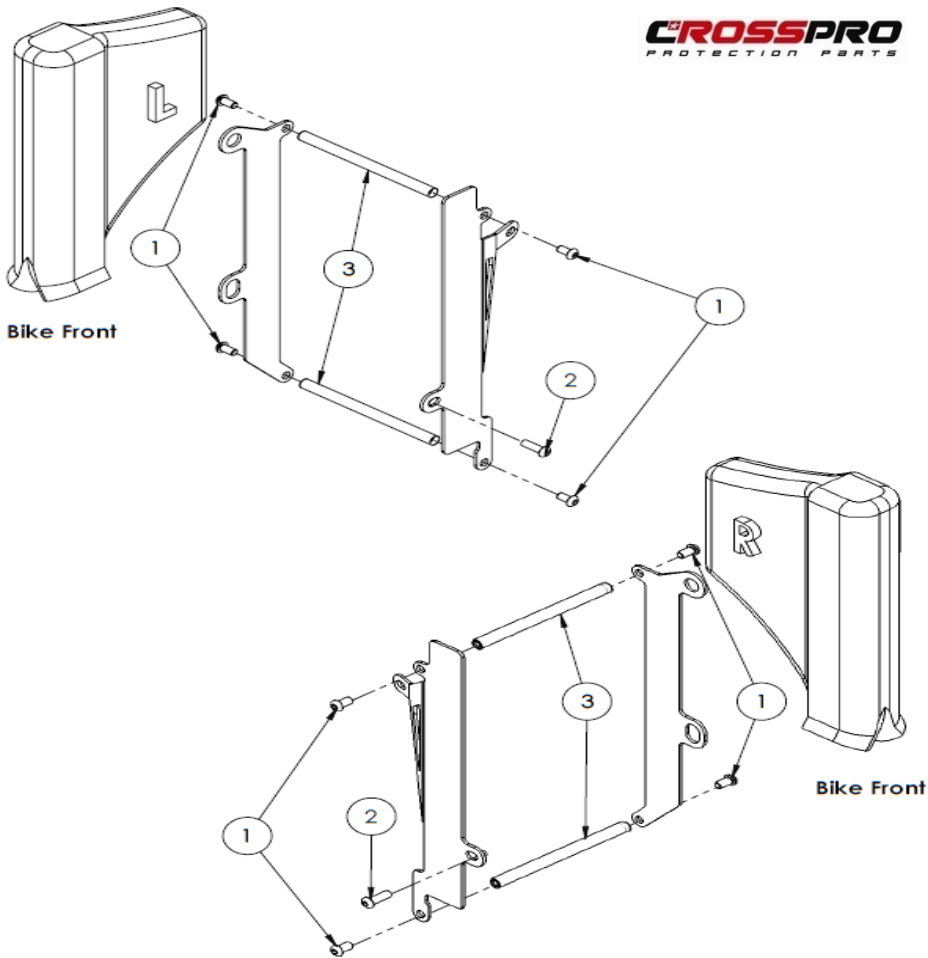

4	-	Washer Large	M6 - DIN 9021	2
3	-	Aluminum Rod	127mm	4
2	-	Screw Round Head With Washer False	M6 x 25 - ISO 7380	2
1	-	Screw Round Head With Washer False	M6 x 12 - ISO 7380	8
Item Nº	Referencia	Componente (Component)	Descrição (Description)	Quant.

Assembly Sequence

1º Remove the radiator Scoops and remove the screws that tighten the radiator to the frame of the bike
2º Apply on the radiator protection part (R IN) the aluminum Rods (item Nº3) using Screws (Item Nº1), see the correct position on the mounting scheme .
(1st photo) Apply the radiator protection part (R IN) previously mounted on the bike radiator.
(2nd photo) Apply the radiator protection part (R OUT) using screws Item Nº1 (Screws) has you can see.
(3rd photo) Radiator protection mounted.
(4th photo) Reseat radiator Scoops using Items Nº2 (Screw) and Nº4 (Washer) has you see on the mounting scheme.
Perform the same steps for the Left side of the bike.

Radiator Guard TM 250 FI 2015

CROSSPRO
PROTECTION PARTS

