


Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos. Protection de radiateur et kit de composants.



- **Photo A:** Retirez l'eau du radiateur et plastique du côté droit de la moto.
 - **Photo B:** Appliquer les items N°2 (Tige d'Aluminium – x2) et N°3 (Tige d'Aluminium – x1) en protection R IN avec les items N°1 (Vis – x3). Montez le ventilateur sur la protection du radiateur avec les vis d'origine.
 - **Photo C:** Monter persiennes du radiateur. Monter protection R OUT avec l'item N°1 (Vis – x3).
 - **Photo D:** Monter le plastique du côté droit.
- Remplacer l'eau dans le radiateur et serrer toutes les vis.**

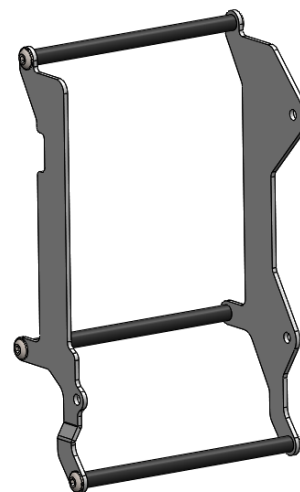

ALUMINUM RADIATOR GUARD

Ref.: 2CP0600219

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM

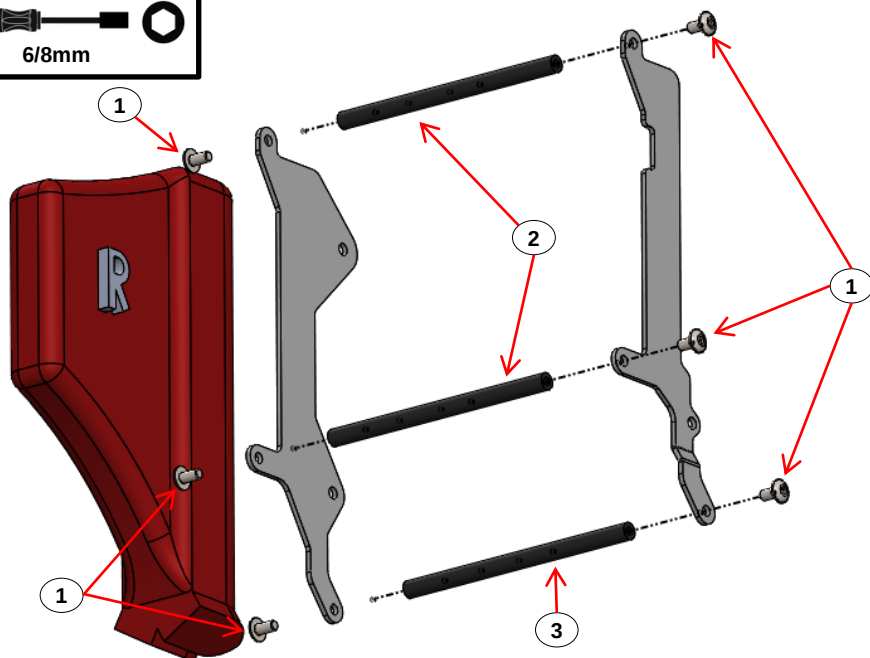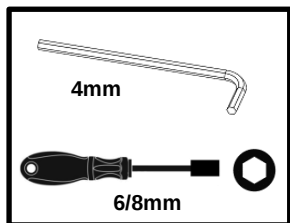




3	Haste Alumínio / Aluminum Rod	158mm	1
2	Haste Alumínio / Aluminum Rod	153mm	2
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x12 - ISO 7380	6
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.::
ACESSÓRIOS (ACCESSORIES)			

English:

Attention – Follow the assembly instruction sequence as you can see in the photos. Aluminum radiator guard and kit of components.

- **Photo A:** Remove radiator water and right side plastic.
 - **Photo B:** Apply items Nº2 (Aluminum Rod – x2) and Nº3 (Aluminum Rod – x1) in R IN protection with item Nº1 (Screw – x3) – to according assembly instruction. Remove motorcycle radiator. Mount item previously assembled with motorcycle radiator use original screws.
 - **Photo C:** Mount radiator lovers. Mount R OUT protection with item Nº1 (Screw – x3).
 - **Photo D:** Mount right side plastic.
- Replace water in radiator and tight all screws.**

ALUMINUM RADIATOR GUARD

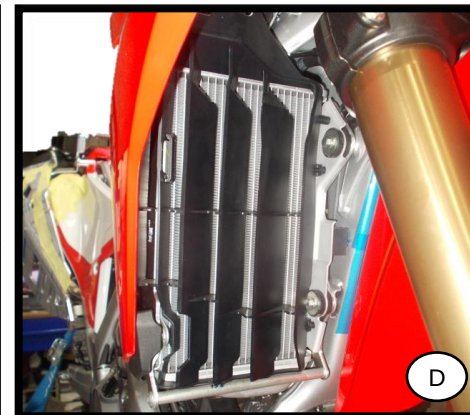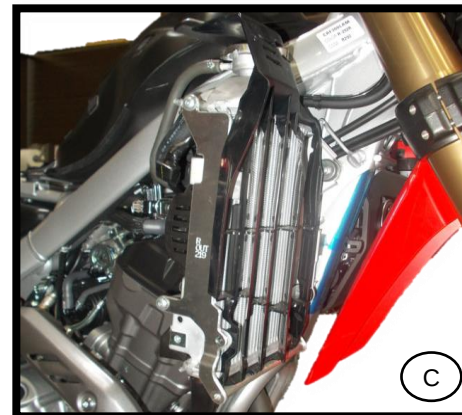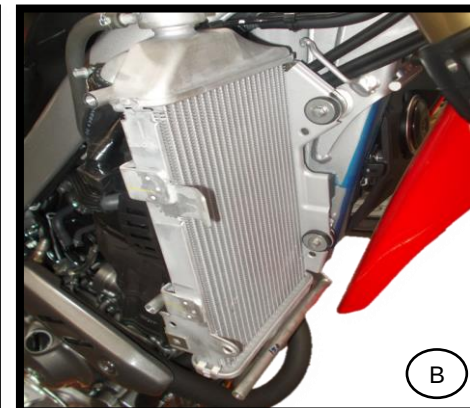

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos. Proteção radiador em alumínio e kit de componentes.

- **Foto A:** Retirar água do radiador e plástico lateral direito da moto.
 - **Foto B:** Aplicar os itens Nº2 (Haste Alumínio – x2) e Nº3 (Haste Alumínio – x1) na proteção R IN com o item Nº1 (Parafuso – x3). Remover radiador da moto. Montar os itens anteriormente montados com o radiador e montar na moto com parafusos de origem.
 - **Foto C:** Montar persianas do radiador. Aplicar proteção R OUT com o item Nº1 (Parafuso – x3).
 - **Foto D:** Montar plástico lateral direito na moto.
- Recolocar a água no radiador e apertar todos os parafusos.**