


Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos. Protection de radiateur et kit de composants.

- **Photo A:** Retirez l'eau du radiateur et côté plastique de la moto.
 - **Photo B:** Appliquer l'item N°2 (Tige d'Aluminium – x2) en protection R IN avec les items N°1 (Vis – x2). Montez le ventilateur sur la protection du radiateur avec les vis d'origine. Monter persiennes du radiateur.
 - **Photo C:** Monter protection R OUT avec l'item N°1 (Vis – x2).
 - **Photo D:** Monter le plastique du côté droit.
- Répétez le processus sur le côté gauche comme instruction d'assemblage. Remplacer l'eau dans le radiateur et serrer toutes les vis.**


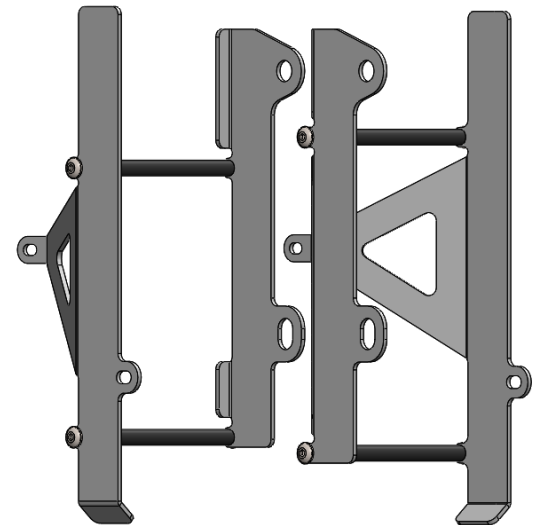


ALUMINUM RADIATOR GUARD

Ref.: 2CP060209A

CROSSPRO
PROTECTION PARTS

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM

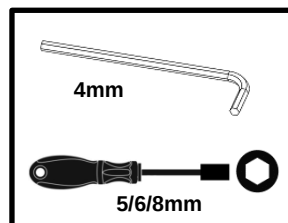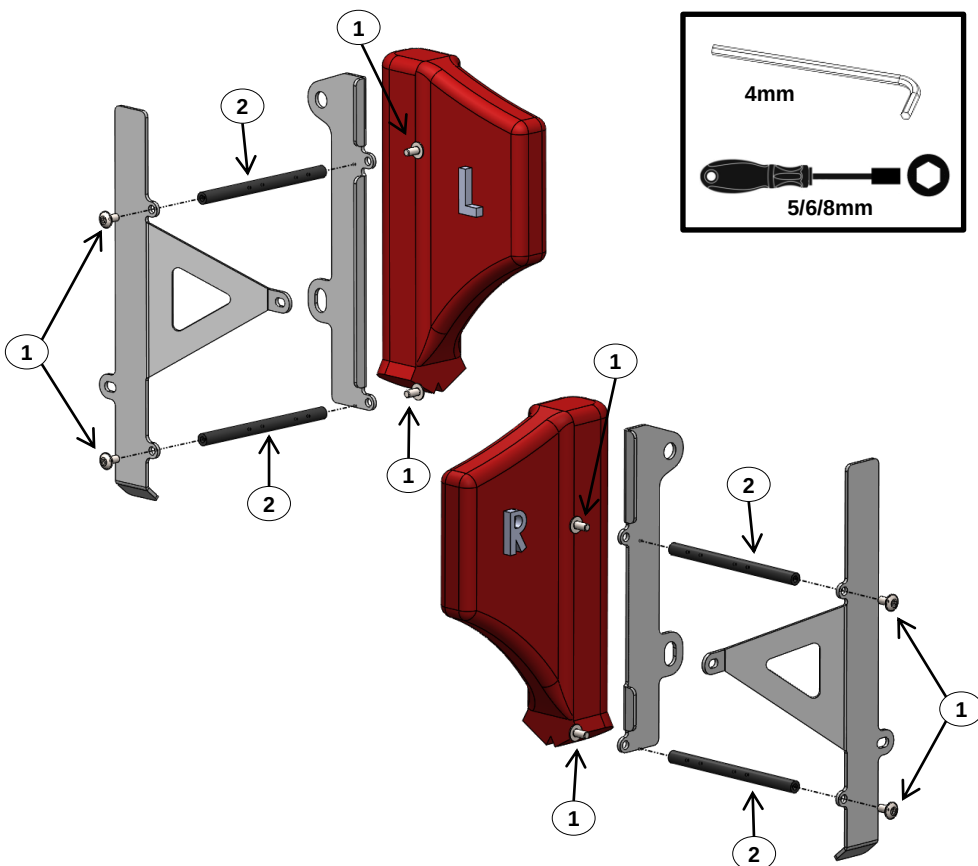

2	Haste Alumínio / Aluminum Rod	134mm	4
1	Paraf. Cabeça Redonda Sext. Int. c. FA/ Screw Round Head With Washer False	M6x12 - ISO 7380	8
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			




English:

Attention – Follow the assembly instruction sequence as you can see in the photos. Aluminum radiator guard and kit of components.

- **Photo A:** Remove radiator water and side plastic.
- **Photo B:** Apply item Nº2 (Aluminum Rod – x2) in R IN protection with item Nº1 (Screw – x2). Remove motorcycle radiator. Mount item previously assembled with motorcycle radiator use original screws. Mount radiator lovers.
- **Photo C:** Mount R OUT protection with item Nº1 (Screw – x2).
- **Photo D:** Mount right side plastic.

Repeat the process to the left side as assembly instruction. Replace water in radiator and tight all screws.

ALUMINUM RADIATOR GUARD

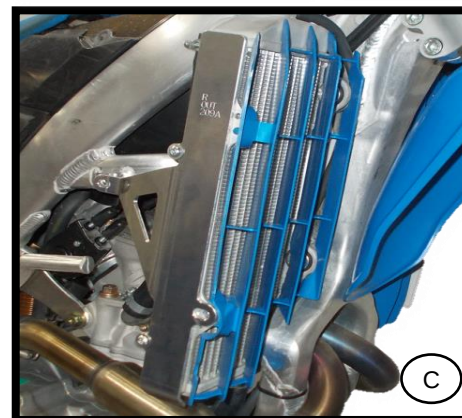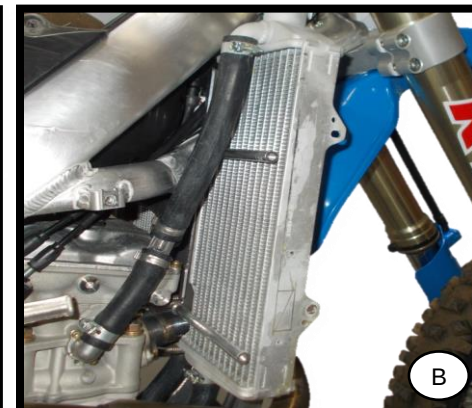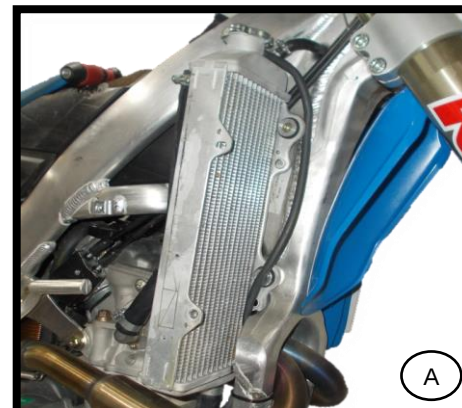

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos. Proteção radiador em alumínio e kit de componentes.

- **Foto A:** Retirar água do radiador e plásticos laterais da moto.
- **Foto B:** Aplicar o item Nº2 (Haste Alumínio – x2) na proteção R IN com o item Nº1 (Parafuso – x2). Remover radiador da moto. Montar os itens anteriormente montados com o radiador e montar na moto com parafusos de origem. Montar persianas do radiador.
- **Foto C:** Aplicar proteção R OUT com o item Nº1 (Parafuso – x2).
- **Foto D:** Montar plástico lateral direito na moto.

Repetir o processo para o lado esquerdo como a instrução de montagem. Recolocar a água no radiador e apertar todos os parafusos.