

**Português:**

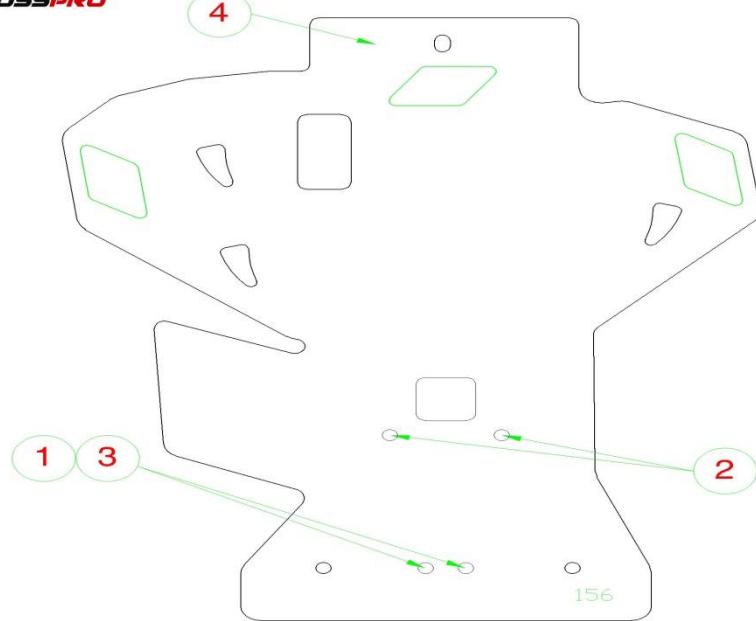
Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos. Aplicar a Cápsula de Borracha na fixação em Inox, siga a instrução de montagem da Cápsula de Borracha.

- **1<sup>a</sup> Foto:** Protecção de motor e kit de componentes
- **2<sup>a</sup> Foto:** Aplique item Nº3 na protecção usando item Nº1, de seguida aplique item Nº6 no item Nº4 e depois coloque-o na parte da frente do quadro apertando com o item Nº5.
- **3<sup>a</sup> Foto:** Retire o sistema de escape da mota.
- **4<sup>a</sup> Foto:** Aplique o item Nº6 no item Nº2 e em seguida na parte central do quadro
- **5<sup>a</sup> Foto:** Coloque a protecção começando pela parte da frente de modo a passar primeiro na fixação do escape, depois ajuste as fixações traseira e do meio.
- **6<sup>a</sup> Foto:** Recoloque o sistema de escape na mota.
- **7<sup>a</sup> Foto:** Ajuste o parafuso da frente no item Nº4.
- **8<sup>a</sup> Foto:** Aperte todos os parafusos.

**CROSSPRO**  
PROTECTION PARTS



**DTC Engine Guard EC**  
**HUSQVARNA TE 250-300 2016**  
**KTM XC 250-300 2016**  
Ref: 2CP0850156

**Assembly Instruction**


ID.013.01

| Item N° | Reference | Component   | Description        | Quant. |
|---------|-----------|---|--------------------|--------|
| 7       | .         | Rubber Cap / Cápsula de Borracha  | .                  | 2      |
| 6       | .         | Clip Inox / Mola de Frizo   | M 6                | 3      |
| 5       | .         | Screw Round Head With Washer False / Paraf. Cabeça Redonda Sext. Int. c/ FA | M6 x 20 - ISO 7380 | 5      |
| 4       | .         | Clamp Inox / Fixação Inox   | Nº90               | 1      |
| 3       | .         | Clamp DTC / Fixação DTC   | Nº93A              | 1      |
| 2       | .         | Clamp Inox / Fixação Inox   | Nº117              | 1      |
| 1       | .         | Special Screw for DTC / Paraf. Especial DTC                                 | 7 x 30             | 2      |

**Assembly Sequence**
**English:**

Attention – Follow the assembly instruction sequence has you can see in the photos. Apply Rubber Cap on the Inox Clamp, assembly Rubber Cap.

- 1<sup>st</sup> Photo: DTC Engine protection part and kit of components.
- 2<sup>nd</sup> Photo: Apply Item N°3 (Clamp DTC) in the protection using Item N°1 (Screw DTC)
- Apply Item N°6 (Clip Inox) in Item N°4 (Clamp Inox) after on the front of the bike.
- 3<sup>rd</sup> Photo: Remove exhaust front attachment to the frame.
- 4<sup>th</sup> Photo: Apply Item N°6 (Clip Inox) in Item N°2 (Clamp Inox) and after in the frame
- 5<sup>th</sup> Photo: Mount Protection on the bike first front parte by passing between the frame of the bike and the exhaust. Adjust middle and rear clamps after placing them in position
- 6<sup>th</sup> Photo: Reseat exhaust attachment as it was initially
- 7<sup>th</sup> Photo: Apply front Screw (Item N°5) in Camp N°90 and adjust.
- 8<sup>th</sup> Photo: Tight all screws .

# DTC Engine Guard EC

## HUSQVARNA TE 250-300 2016

## KTM XC 250-300 2016



ID.022.02

DATE: 12/12/2017